


» Kontron User's Guide «

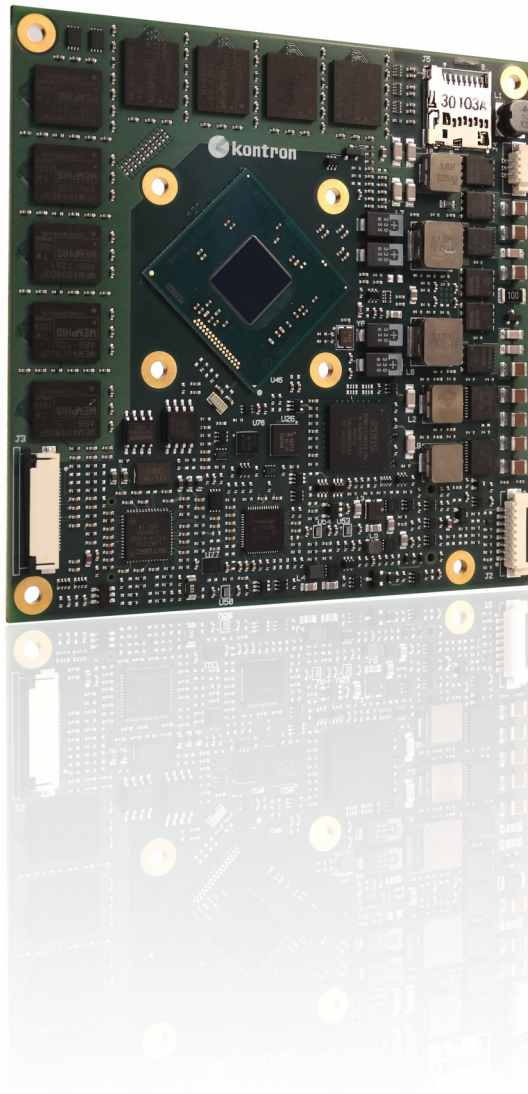

COMe-cBTi6R

Document Revision 1.0

» Table of Contents «

1	User Information.....	6
1.1	About This Document.....	6
1.2	Copyright Notice.....	6
1.3	Trademarks.....	6
1.4	Standards.....	6
1.5	Warranty.....	7
1.6	Technical Support.....	7
2	Introduction.....	8
2.1	Product Description.....	8
2.2	Naming clarification.....	8
2.3	Understanding COM Express® Functionality.....	8
2.4	COM Express® Documentation.....	9
2.5	COM Express® Benefits.....	9
3	Product Specification.....	10
3.1	Module definition.....	10
3.2	Functional Specification.....	11
3.3	Block Diagram.....	15
3.4	Accessories.....	16
3.5	Electrical Specification.....	17
3.5.1	Supply Voltage.....	17
3.5.2	Power Supply Rise Time.....	17
3.5.3	Supply Voltage Ripple.....	17
3.5.4	Power Consumption.....	17
3.5.5	ATX Mode.....	18
3.5.6	Single Supply Mode.....	18
3.6	Power Control.....	19
3.7	Environmental Specification.....	20
3.7.1	Temperature Specification.....	20
3.7.2	Humidity.....	20
3.8	Standards and Certifications.....	21
3.9	MTBF.....	23
3.10	Mechanical Specification.....	24
3.11	Module Dimensions.....	25
3.12	Onboard Fan Connector.....	26
3.13	Thermal Management, Heatspreader and Cooling Solutions.....	27
4	Features and Interfaces.....	28
4.1	Onboard eMMC Flash.....	28
4.2	Secure Digital Card.....	29
4.3	S5 Eco Mode.....	30

4.4	Rapid Shutdown.....	31
4.5	LPC.....	33
4.6	Serial Peripheral Interface (SPI).....	34
4.7	SPI boot.....	34
4.8	M.A.R.S.....	36
4.9	UART.....	37
4.10	Fast I2C.....	38
4.11	Dual Staged Watchdog Timer.....	39
4.12	Speedstep Technology.....	40
4.13	C-States.....	41
4.14	Graphics Features.....	42
4.15	ACPI Suspend Modes and Resume Events.....	43
4.16	USB.....	44
5	System Resources.....	45
5.1	Internal I2C Bus.....	45
5.2	External I2C Bus.....	45
5.3	System Management (SM) Bus.....	45
6	Connectors.....	46
6.1	Connector Location.....	46
7	Pinout List.....	47
7.1	General Signal Description.....	47
7.2	Connector X1A Row A.....	48
7.3	Connector X1A row B.....	50
7.4	Connector X1B Row C.....	52
7.5	Connector X1B Row D.....	54
8	Connector J1 micro-SD Card.....	56
9	Connector J2 Fan Control.....	57
10	Connector J3 XDP SFF connector, not available on production revision.....	58
11	Connector J4 JTAG CPLD.....	59
12	BIOS Operation.....	60
12.1	Determining the BIOS Version.....	60
12.2	BIOS Update.....	60
12.3	POST Codes.....	60
12.4	Setup Guide.....	60
12.5	BIOS Setup.....	62
12.5.1	Main.....	62

12.5.2	Advanced.....	67
12.5.3	Security.....	86
12.5.4	Boot.....	88
12.5.5	Exit.....	89

1 User Information

1.1 About This Document

This document provides information about products from Kontron Europe GmbH and/or its subsidiaries. No warranty of suitability, purpose, or fitness is implied. While every attempt has been made to ensure that the information in this document is accurate, the information contained within is supplied "as-is" and is subject to change without notice.

For the circuits, descriptions and tables indicated, Kontron assumes no responsibility as far as patents or other rights of third parties are concerned.

1.2 Copyright Notice

Copyright © 2003-2016 Kontron Europe GmbH

All rights reserved. No part of this document may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), without the express written permission of Kontron Europe GmbH.

DIMM-PC®, PISA®, ETX®, ETXexpress®, microETXexpress®, X-board®, DIMM-IO® and DIMM-BUS® are trademarks or registered trademarks of Kontron Europe GmbH. Kontron is trademark or registered trademark of Kontron AG.

1.3 Trademarks

The following lists the trademarks of components used in this board.

- » IBM, XT, AT, PS/2 and Personal System/2 are trademarks of International Business Machines Corp.
- » Microsoft is a registered trademark of Microsoft Corp.
- » Intel is a registered trademark of Intel Corp.
- » All other products and trademarks mentioned in this manual are trademarks of their respective owners.

1.4 Standards

Kontron Europe GmbH is certified to ISO 9000 standards.

1.5 Warranty

For this Kontron Europe GmbH product warranty for defects in material and workmanship exists as long as the warranty period, beginning with the date of shipment, lasts. During the warranty period, Kontron Europe GmbH will decide on its discretion if defective products are to be repaired or replaced.

Within the warranty period, the repair of products is free of charge as long as warranty conditions are observed.

Warranty does not apply for defects arising/resulting from improper or inadequate maintenance or handling by the buyer, unauthorized modification or misuse, as well as the operation outside of the product's environmental specifications and improper installation and maintenance.

Kontron Europe GmbH will not be responsible for any defects or damages to other products not supplied by Kontron Europe GmbH that are caused by a faulty Kontron Europe GmbH product.

1.6 Technical Support

Technicians and engineers from Kontron Europe GmbH and/or its subsidiaries are available for technical support. We are committed to make our product easy to use and will help you use our products in your systems.

Please consult our Website at <http://www.kontron.com/support> for the latest product documentation, utilities, drivers and support contacts. Consult our customer section <http://emdcustomersection.kontron.com> for the latest BIOS downloads, Product Change Notifications, Board Support Packages, DemoImages, 3D drawings and additional tools and software. In any case you can always contact your board supplier for technical support.

2 Introduction

2.1 Product Description

The Kontron COMe-cBTi6R comes with an especially robust design and is tailored to suit shock- and vibration-proof mobile and stationary applications as well as the extended temperature range of -40°C to +85°C. It is exclusively equipped with Intel® Atom™ E3800 family processors and soldered RAM. According to the different requirements of real-time controllers or memory-hungry HMIs either up to 4GB LPDDR3 with ECC or up to 8GB LPDDR3 without ECC is available. The support of Rapid Shutdown offers an extremely fast shutdown of a computer system to minimize the risk of system or data tampering in mission critical applications. Software and application data can be stored on the eMMC Flash and via 2 SATA interfaces. Any peripherals can be connected via 1x USB 3.0, 1x USB OTG, 8x USB 2.0 or 4x PCIe x1.

2.2 Naming clarification

COM Express® defines a Computer-On-Module, or COM, with all components necessary for a bootable host computer, packaged as a super component.

- » COMe-bXX# modules are Kontron's COM Express® modules in basic form factor (125mm x 95mm)
- » COMe-cXX# modules are Kontron's COM Express® modules in compact form factor (95mm x 95mm)
- » COMe-mXX# modules are Kontron's COM Express® modules in mini form factor (55mm x 84mm)

The product names for Kontron COM Express® Computer-on-Modules consist of a short form of the industry standard (**COMe-**), the form factor (**b**=basic, **c**=compact, **m**=mini), the capital letters for the CPU and Chipset Codenames (**XX**) and the pin-out type (**#**) followed by the CPU Name.

2.3 Understanding COM Express® Functionality

All Kontron COM Express® basic and compact modules contain two 220pin connectors; each of it has two rows called Row A & B on primary connector and Row C & D on secondary connector. COM Express® Computer-on-modules feature the following maximum amount of interfaces according to the PICMG module Pin-out type:

Feature	Pin-Out Type 1	Pin-Out Type 10	Pin-Out Type 2	Pin-Out Type 6
HD Audio	1x	1x	1x	1x
Gbit Ethernet	1x	1x	1x	1x
Serial ATA	4x	4x	4x	4x
Parallel ATA	-	-	1x	-
PCI	-	-	1x	-
PCI Express x1	6x	6x	6x	8x
PCI Express x16 (PEG)	-	-	1x	1x
USB Client	1x	1x	-	-
USB 2.0	8x	8x	8x	8x
USB 3.0	-	2x	-	4x
VGA	1x	-	1x	1x
LVDS	Dual Channel	Single Channel	Dual Channel	Dual Channel
DP++ (SDVO/DP/HDMI/DVI)	1x optional	1x	3x shared with PEG	3x
LPC	1x	1x	1x	1x
External SMB	1x	1x	1x	1x
External I2C	1x	1x	1x	1x
GPIO	8x	8x	8x	8x
SDIO shared w/GPIO	1x optional	1x optional	-	1x optional
UART (2-wire COM)	-	2x	-	2x
FAN PWM out	-	1x	-	1x

2.4 COM Express® Documentation

This product manual serves as one of three principal references for a COM Express® design. It documents the specifications and features of COMe-cBTi6R. Additional references are available at your Kontron Support or at PICMG®:

- » The COM Express® Specification defines the COM Express® module form factor, pin-out, and signals. This document is available at the PICMG® website by filling out the order form.
- » The COM Express® Design Guide by PICMG® serves as a general guide for baseboard design, with a focus on maximum flexibility to accommodate a wide range of COM Express® modules.



Some of the information contained within this product manual applies only to certain product revisions (CE: xxx). If certain information applies to specific product revisions (CE: xxx) it will be stated. Please check the product revision of your module to see if this information is applicable.

2.5 COM Express® Benefits

COM Express® modules are very compact, highly integrated computers. All Kontron COM Express® modules feature a standardized form factor and a standardized connector layout which carry a specified set of signals. Each COM is based on the COM Express® specification. This standardization allows designers to create a single-system baseboard that can accept present and future COM Express® modules.

The baseboard designer can optimize exactly how each of these functions implements physically. Designers can place connectors precisely where needed for the application on a baseboard designed to optimally fit a system's packaging.

A single baseboard design can use a range of COM Express® modules with different sizes and pin-outs. This flexibility can differentiate products at various price/performance points, or when designing future proof systems that have a built-in upgrade path. The modularity of a COM Express® solution also ensures against obsolescence when computer technology evolves. A properly designed COM Express® baseboard can work with several successive generations of COM Express® modules.

A COM Express® baseboard design has many advantages of a customized computer-board design and, additionally, delivers better obsolescence protection, heavily reduced engineering effort, and faster time to market.

3 Product Specification

3.1 Module definition

The COM Express® compact sized Computer-on-Module COMe-cBTi6R (CVVR (Coyote Hills)) follows pin-out Type 6 and is compatible to PICMG specification COM.0 Rev 2.1. The COMe-cBTi6R, based on Intel's Bay Trail platform, is available in different variants to cover the demand of different performance, price and power:

Industrial temperature grade modules (E2: -40°C to +85°C operating)

Part Number	Product Name	Processor	Memory Down	eMMC Flash	mSD Socket	TPM	Ethernet	PCIe
36016-8016-19-4	COMe-cBTi6R E3845 8GB/16S	BayTrail-I Intel® Atom E3845	2x4GB non-ECC	16GB SLC	Yes	Yes	Intel® i210IT	3x1
36016-8000-19-4	COMe-cBTi6R E3845 8GB	BayTrail-I Intel® Atom E3845	2x4GB non-ECC	-	Yes	Yes	Intel® i210IT	3x1
36016-4032-19-4	COMe-cBTi6R E3845 4GB/32S	BayTrail-I Intel® Atom E3845	1x4GB non-ECC	32GB SLC	Yes	Yes	Intel® i210IT	3x1
36016-4000-19-4	COMe-cBTi6R E3845 4E	BayTrail-I Intel® Atom E3845	1x4GB ECC	-	Yes	Yes	SMSC LAN7500i	4x1 / 1x4
36016-2000-17-2	COMe-cBTi6R E3827 2E	BayTrail-I Intel® Atom E3827	1x2GB ECC	-	Yes	Yes	SMSC LAN7500i	4x1 / 1x4
36016-2000-15-2	COMe-cBTi6R E3826 2E	BayTrail-I Intel® Atom E3826	1x2GB ECC	-	Yes	Yes	SMSC LAN7500i	4x1 / 1x4
36016-2000-13-2	COMe-cBTi6R E3825 2E	BayTrail-I Intel® Atom E3825	1x2GB ECC	-	Yes	Yes	SMSC LAN7500i	4x1 / 1x4
36016-1000-15-1	COMe-cBTi6R E3815 1E	BayTrail-I Intel® Atom E3815	1x1GB ECC	-	Yes	Yes	SMSC LAN7500i	4x1 / 1x4

Memory configurations (36016-MMxx-xx-x)

- » MM = 10: 1024MB DDR3L Memory
- » MM = 20: 2048MB DDR3L Memory
- » MM = 40: 4096MB DDR3L Memory
- » MM = 80: 8192MB DDR3L Memory

Onboard Flash configurations, available on E3800 variants only (36016-xxFF-xx-x)

- » FF = 00: without eMMC Flash
- » FF = 20: 2GB onboard eMMC Flash
- » FF = 40: 4GB onboard eMMC Flash
- » FF = 80: 8GB onboard eMMC Flash
- » FF = 16: 16GB onboard eMMC Flash
- » FF = 32: 32GB onboard eMMC Flash
- » FF = 64: 64GB onboard eMMC Flash

Optional hardware features

- » ECC memory
- » eMMC Flash
- » PCIe Intel® i210IT instead of USB SMCS LAN7500i

Optional BIOS/Software features:

- » TXE Firmware with Encryption support (AES, PAVP ...)



Optional hardware and BIOS features are available project based only for variants not listed above. Please contact your local sales for customized articles.

3.2 Functional Specification

Processor

The 32nm Intel® Atom™ E3800 (BayTrail-I) CPU family supports:

- » Intel® 64
- » Enhanced Intel SpeedStep® Technology
- » Thermal Monitoring Technologies
- » Execute Disable Bit
- » Virtualization Technology VT-x
- » 2 Display Pipes for dual independent displays

CPU specifications

Intel®	Atom™	Atom™	Atom™	Atom™	Atom™
-	E3845	E3827	E3826	E3825	E3815
# of Cores	4	2	2	2	1
# of Threads	4	2	2	2	1
CPU Nominal frequency	1.91GHz	1.75GHz	1.46GHz	1.33GHz	1.46GHz
CPU Burst frequency	-	-	-	-	-
LFM/LPM Frequency	533MHz	533MHz	533MHz	533MHz	533MHz
Tjunction	110°C	110°C	110°C	110°C	110°C
Thermal Design Power (TDP)	10W	8W	7W	6W	5W
SDP	-	-	-	-	-
C-States	C1/C1E/C6	C1/C1E/C6	C1/C1E/C6	C1/C1E/C6	C1/C1E/C6
Smart Cache	2x1MB	2x512kB	2x512kB	2x512kB	512kB
Memory Type	DDR3L-1333	DDR3L-1333	DDR3L-1066	DDR3L-1066	DDR3L-1066
Max Memory Size	2x8GB or 1x8GB ECC	2x8GB or 1x8GB ECC	2x8GB or 1x8GB ECC	8GB	8GB
ECC Memory(optional)	Yes	Yes	Yes	Yes	Yes
Graphics Model	Intel HD®	Intel HD®	Intel HD®	Intel HD®	Intel HD®
GFX Base Frequency	542MHz	542MHz	533MHz	533MHz	400MHz
GFX Max Dynamic Frequ.	792MHz	792MHz	667MHz	-	-
GFX Technology	GT1 4EU	GT1 4EU	GT1 4EU	GT1 4EU	GT1 4EU
AEC Q100 automtovie Qual.	Yes	Yes	Yes	Yes	Yes
SDIO	Yes	Yes	Yes	Yes	Yes
eMMC	Yes	Yes	Yes	Yes	Yes
AES-NI (optional)	Yes	Yes	Yes	Yes	Yes

Memory

Sockets	memory down
Memory Type	DDR3L-1066/1333
Maximum Size	1 - 4GB ECC or 1 - 8 GB nECC
Technology	Dual Channel

Graphics Core

The integrated Intel® HD Graphics (Gen 7) supports:

Graphics Core Render Clock	Intel® HD Graphics (Gen 7), 400-542MHz Clock, 667-792MHz Turbo
Execution Units / Pixel Pipelines	4
Max Graphics Memory	2048MB
GFX Memory Bandwidth (GB/s)	up to 21.3
GFX Memory Technology	DVMT
API (DirectX/OpenGL)	11 / 3.0 + OCL 1.1
Shader Model	3.0
Hardware accelerated Video	H.264 / MPEG1,2,4 / VC1 / WMV9 / Blu-ray
Independent/Simultaneous Displays	2
Display Port	DP 1.1a / eDP 1.3
HDCP support	HDCP / PAVP 2 (optional)

Monitor output

CRT max Resolution	2560x1600
TV out:	-

LVDS

LVDS Bits/Pixel	1x18/24, 2x18/24 with DP2LVDS
LVDS Bits/Pixel with dithering	-
LVDS max Resolution:	1920x1200
PWM Backlight Control:	YES
Supported Panel Data:	EDID/DID

Display Interfaces

Discrete Graphics	2x MIPI-CSI on PEG
Digital Display Interface DDI1	DP++
Digital Display Interface DDI2	DP++ muxed with LVDS
Digital Display Interface DDI3	-
Maximum Resolution on DDI	2560x1600@60Hz

Storage

onboard SSD	2-64GB eMMC
SD Card support	1x mSD Socket onboard, 1x SDIO for WiFi shared with GPIO
IDE Interface	-
Serial-ATA	2x SATA 3Gb/s
SATA AHCI	AHCI with NCQ, HotPlug, Staggered Spinup,
SATA RAID	-

Connectivity

USB	7x USB 2.0
USB 3.0	1x USB 3.0
USB Client	1x USB Client (USB #7)
PCI	-
PCI External Masters	-
PCI Express	3x PCIe x1 Gen2 w/PCIe LAN
Max PCI Express	4x PCIe x1 Gen2 w/USB LAN
PCI Express x2/x4 configuration	YES
Ethernet	10/100/1000
Ethernet controller	SMSC LAN7500i or Intel i210IT

Feature OS Support Matrix

-	Windows 8		Windows 7		WEC		Tizen	Fedora/Yocto		Android	
-	E3800	Celeron	E3800	Celeron	E3800	Celeron	E3800	E3800	Celeron	E3800	Celeron
eMMC Storage	X	X	-	-	X	-	X	X	-	-	-
eMMC Boot	X	X	-	-	X	-	X	X	-	X	X
SD Storage	X	X	X	-	X	-	X	X	-	X	X
SD Boot	-	-	X	-	X	-	X	X	-	X	X
MIPI-CSI	-	-	-	-	-	-	-	X	-	-	-

PCI Express Configuration

By default, the COMe-cBTi6R supports x1 PCIexpress lane configuration only (Configuration 0). Following x2/x4 configurations are available via Management Engine Softstrap Options with a customized Flash Descriptor.

PCIe	Port #0	Port #1	Port #2	Port #3
Configuration 0	x1	x1	x1	x1
Configuration 1	x2		x1	x1
Configuration 2	x2		x2	
Configuration 3	x4			



- PCIe Port #3 is available with USB Ethernet Controller Option only
- Configuration 0 is the default setting
- Configuration 1 - 3 are available with customized BIOS versions

Ethernet

The SMSC LAN7500i or Intel i210IT ethernet supports:

- » Jumbo Frames
- » Time Sync Protocol Indicator
- » WOL (Wake On LAN)
- » PXE (Preboot eXecution Environment)

Misc Interfaces and Features

Supported BIOS Size/Type	8MB SPI
Audio	HD Audio
Onboard Hardware Monitor	Nuvoton NCT7802Y
Trusted Platform Module	Atmel AT97SC3204
Miscellaneous	2x UART / PWM FAN / MIPI-CSI on PEG

Kontron Features

External I2C Bus	Fast I2C, MultiMaster capable
M.A.R.S. support	YES
Embedded API	KEAPI3
Custom BIOS Settings / Flash Backup	YES
Watchdog support	Dual Staged

Additional features

- » All solid capacitors (POSCAP). No tantalum capacitors used.
- » Optimized RTC Battery monitoring to secure highest longevity
- » Real fast I2C with transfer rates up to 40kB/s.
- » Discharge logic on all onboard voltages for highest reliability

Power Features

Singly Supply Support	YES
Supply Voltage	4.75 - 20V
ACPI	ACPI 3.0
S-States	S0, S3, S4, S5
S5 Eco Mode	YES
Misc Power Management	DPST 4.0, iFFS, Rapid Shutdown


Power Consumption and Performance

Full Load Power Consumption	3.5 - 13.5W
Kontron Performance Index	9332 - 23937
Kontron Performance/Watt	1944 - 2986



Detailed Power Consumption measurements in all states and benchmarks for CPU, Graphics and Memory performance are available in Application Note [KEMAP054](#) at [EMD Customer Section](#).

3.3 Block Diagram

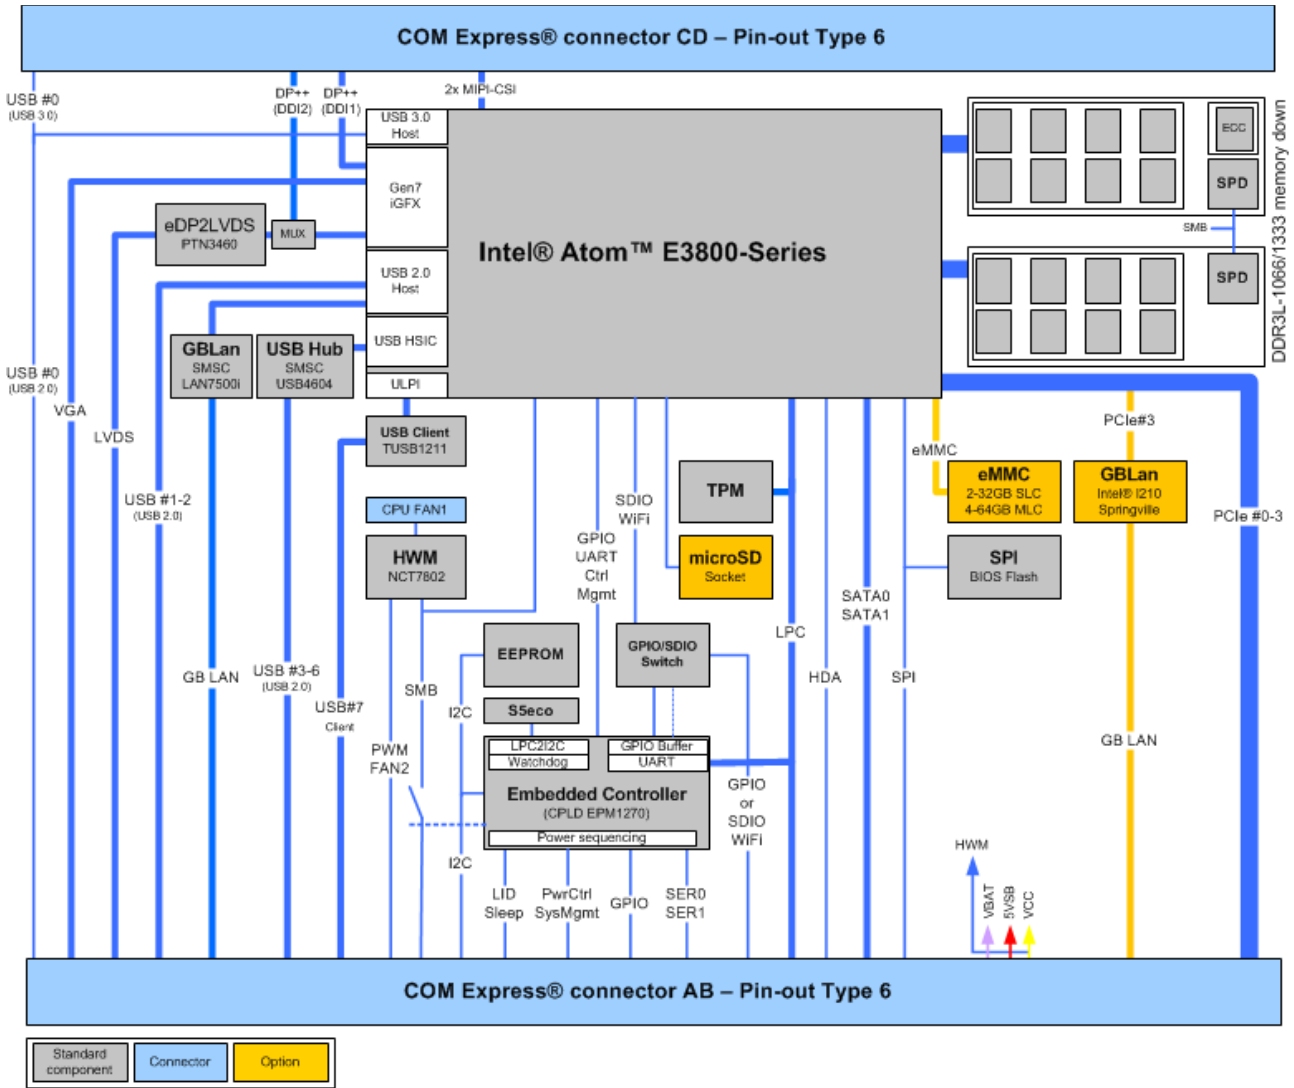

3.4 Accessories

Product specific accessories

Product Number	Heatspreader and Cooling Solutions	Comment
36016-0000-99-0	HSP COMe-cBTi6R thread	For all CPUs and temperature grades
36016-0000-99-1	HSP COMe-cBTi6R through	For all CPUs and temperature grades

General accessories

Part Number	COMe pin-out Type 6 compatible accessories	Project Code	Comment
38114-0000-00-0	COM Express® Reference Carrier Type 6	ADAS	mITX Carrier with 8mm COMe connector
38106-0000-00-0	COM Express® Eval Carrier Type 6	Topanga Canyon	ATX Carrier with 5mm COMe connector
96007-0000-00-3	ADA-PCIe-DP	APDP	PCIe x16 to DP Adapter for Evaluation Carrier
96007-0000-00-7	ADA-Type6-DP3	DV06	(sandwich) Adapter Card for 3x DisplayPort
96006-0000-00-2	COMe POST T6	NFCB	POST Code / Debug Card
38019-0000-00-0	ADA-COMe-Height-dual	EERC	Height Adapter
38106-0000-00-5	COMe Eval Starterkit T6	Topanga Canyon	Starterkit with COMe Evaluation Carrier T6
38114-0000-00-5	COMe Ref. Starterkit T6	ADAS	Starterkit with COMe Reference Carrier T6
Part Number	Mounting	Comment	
38017-0000-00-5	COMe Mount KIT 5mm 1set	Mounting Kit for 1 module including screws for 5mm connectors	
38017-0100-00-5	COMe Mount KIT 5mm 100sets	Mounting Kit for 100 modules including screws for 5mm connectors	
38017-0000-00-0	COMe Mount KIT 8mm 1set	Mounting Kit for 1 module including screws for 8mm connectors	
38017-0100-00-0	COMe Mount Kit 8mm 100sets	Mounting Kit for 100 modules including screws for 8mm connectors	
Part Number	Cooling Solutions	Comment	
36099-0000-99-0	COMe Active Uni Cooler	for CPUs up to 20W TDP, to be mounted on HSP	
36099-0000-99-1	COMe Passive Uni Cooler	for CPUs up to 10W TDP, to be mounted on HSP	
Part Number	Display Adapter	Comment	
9-5000-0352	ADA-LVDS-DVI 18bit	LVDS to DVI converter	
9-5000-0353	ADA-LVDS-DVI 24bit	LVDS to DVI converter	
96006-0000-00-8	ADA-DP-LVDS	DP to LVDS adapter	
96082-0000-00-0	KAB-ADAPT-DP-DVI	DP to DVI adapter cable	
96083-0000-00-0	KAB-ADAPT-DP-VGA	DP to VGA adapter cable	
96084-0000-00-0	KAB-ADAPT-DP-HDMI	DP to HDMI adapter cable	
Part Number	Cables	Comment	
96079-0000-00-0	KAB-HSP 200mm	Cable adapter to connect FAN to module (COMe basic/compact)	
96079-0000-00-2	KAB-HSP 40mm	Cable adapter to connect FAN to module (COMe basic/compact)	
Part Number	Miscellaneous	Comment	
18029-0000-00-0	MARS Smart Battery Kit	Starterkit Kontron Mobile Application platform for Rechargeable Systems	

3.5 Electrical Specification

3.5.1 Supply Voltage

Following supply voltage is specified at the COM Express® connector:

VCC:	4.75 - 20V
Standby:	5V DC +/- 5%
RTC:	2.5V - 3.47V



- 5V Standby voltage is not mandatory for operation.
- Extended / Industrial Temperature (E1, XT, RXT) variants are validated for 12V supply only

3.5.2 Power Supply Rise Time

» The input voltages shall rise from $\leq 10\%$ of nominal to within the regulation ranges within 0.1ms to 20ms.

» There must be a smooth and continuous ramp of each DC input voltage from 10% to 90% of its final set-point following the ATX specification

3.5.3 Supply Voltage Ripple

» Maximum 100 mV peak to peak 0 – 20 MHz

3.5.4 Power Consumption

The maximum Power Consumption of the different COMe-cBTi6R variants is 3.5 - 13.5W (100% CPU load on all cores; 90°C CPU temperature). Further information with detailed measurements are available in Application Note KEMAP054 available on [EMD Customer Section](#). Information there is available after registration.

3.5.5 ATX Mode

By connecting an ATX power supply with VCC and 5VSB, PWR_OK is set to low level and VCC is off. Press the Power Button to enable the ATX PSU setting PWR_OK to high level and powering on VCC. The ATX PSU is controlled by the PS_ON# signal which is generated by SUS_S3# via inversion. VCC can be 4.75 - 20V in ATX Mode. On Computer-on-Modules supporting a wide range input down to 4.75V the input voltage shall always be higher than 5V Standby (VCC > 5VSB).

State	PWRBTN#	PWR_OK	V5_StdBy	PS_ON#	VCC
G3	x	x	0V	x	0V
S5	high	low	5V	high	0V
S5 → S0	PWRBTN Event	low → high	5V	high → low	0 V → VCC
S0	high	high	5V	low	VCC

3.5.6 Single Supply Mode

In single supply mode (or automatic power on after power loss) without 5V Standby the module will start automatically when VCC power is connected and Power Good input is open or at high level (internal PU to 3.3V). PS_ON# is not used in this mode and VCC can be 4.75 - 20V.

To power on the module from S5 state press the power button or reconnect VCC. Suspend/Standby States are not supported in Single Supply Mode.

State	PWRBTN#	PWR_OK	V5_StdBy	VCC
G3	x	x	x	0
G3 → S0	high	open / high	x	connecting VCC
S5	high	open / high	x	VCC
S5 → S0	PWRBTN Event	open / high	x	reconnecting VCC



Signals marked with “x” are not important for the specific power state. There is no difference if connected or open.

All ground pins have to be tied to the ground plane of the carrier board.

3.6 Power Control

Power Supply

The COMe-cBTi6R supports a power input from 4.75 - 20V. The supply voltage is applied through the VCC pins (VCC) of the module connector.

Power Button (PWRBTN#)

The power button (Pin B12) is available through the module connector described in the pinout list. To start the module via Power Button the PWRBTN# signal must be at least 50ms ($50\text{ms} \leq t < 4\text{s}$, typical 400ms) at low level (Power Button Event).

Pressing the power button for at least 4seconds will turn off power to the module (Power Button Override).

Power Good (PWR_OK)

The COMe-cBTi6R provides an external input for a power-good signal (Pin B24). The implementation of this subsystem complies with the COM Express® Specification. PWR_OK is internally pulled up to 3.3V and must be high level to power on the module.

Reset Button (SYS_RESET#)

The reset button (Pin B49) is available through the module connector described in the pinout list. The module will stay in reset as long as SYS_RESET# is grounded. If available, the BIOS setting for "Reset Behavior" must be set to "Power Cycle".



Modules with Intel® Chipset and active Management Engine do not allow to hold the module in Reset out of S0 for a long time. At about 10s holding the reset button the ME will reboot the module automatically

SM-Bus Alert (SMB_ALERT#)

With an external battery manager present and SMB_ALERT# (Pin B15) connected the module always powers on even if BIOS switch "After Power Fail" is set to "Stay Off".

3.7 Environmental Specification

3.7.1 Temperature Specification

Kontron defines following temperature grades for Computer-on-Modules in general. Please see chapter 'Product Specification' for available temperature grades for the COMe-cBTi6R

Temperature Specification	Operating	Non-operating	Validated Input Voltage
Commercial grade	0°C to +60°C	-30°C to +85°C	VCC: 4.75 - 20V
Extended Temperature (E1)	-25°C to +75°C	-30°C to +85°C	VCC: 12V
Industrial grade by Screening (XT)	-40°C to +85°C	-40°C to +85°C	VCC: 12V
Industrial grade by Design (E2)	-40°C to +85°C	-40°C to +85°C	VCC: 4.75 - 20V

Operating with Kontron heatspreader plate assembly

The operating temperature defines two requirements:

- » the maximum ambient temperature with ambient being the air surrounding the module.
- » the maximum measurable temperature on any spot on the heatspreader's surface

Test specification:

Temperature Grade	Validation requirements
Commercial grade	at 60°C HSP temperature the CPU @ 100% load needs to run at nominal frequency
Extended Temperature (E1)	at 75°C HSP temperature the CPU @ 75% load is allowed to start speedstepping for thermal protection
Industrial grade by Screening (XT)	at 85°C HSP temperature the CPU @ 50% load is allowed to start throttling for thermal protection
Industrial grade by Design (E2)	at 85°C HSP temperature the CPU @ 50% load is allowed to start throttling for thermal protection

Operating without Kontron heatspreader plate assembly

The operating temperature is the maximum measurable temperature on any spot on the module's surface. Please ensure, that all components are running within their required specification.

3.7.2 Humidity

- » 93% relative Humidity at 40°C, non-condensing (according to IEC 60068-2-78)

3.8 Standards and Certifications

RoHS II

The **COMe-cBTi6R** is compliant to the directive 2011/65/EU on the Restriction of the use of certain Hazardous Substances (RoHS II) in electrical and electronic equipment



Component Recognition UL 60950-1

The **COM Express® compact** form factor Computer-on-Modules are Recognized by Underwriters Laboratories Inc. Representative samples of this component have been evaluated by UL and meet applicable UL requirements.

UL Listings:

» [NWGQ2.E304278](#)

» [NWGQ8.E304278](#)



WEEE Directive

WEEE Directive 2002/96/EC is not applicable for Computer-on-Modules.

Conformal Coating

Conformal Coating is available for Kontron Computer-on-Modules and for validated SO-DIMM memory modules. Please contact your local sales or support for further details.

Shock & Vibration

The **COM Express® compact** form factor Computer-on-Modules successfully passed shock and vibration tests according to

- » IEC/EN 60068-2-6 (Non operating Vibration, sinusoidal, 10Hz-4000Hz, +/-0.15mm, 2g)
- » IEC/EN 60068-2-27 (Non operating Shock Test, half-sinusoidal, 11ms, 15g)

EMC

Validated in Kontron reference housing for EMC the **COMe-cBTi6R** follows the requirements for electromagnetic compatibility standards

- » EN55022

3.9 MTBF

The following MTBF (Mean Time Before Failure) values were calculated using a combination of manufacturer's test data, if the data was available, and the Telcordia (Bellcore) issue 2 calculation for the remaining parts.

The calculation method used is "Telcordia Issue 2 Method 1 Case 3" in a ground benign, controlled environment (GB,GC). This particular method takes into account varying temperature and stress data and the system is assumed to have not been burned in.

Other environmental stresses (extreme altitude, vibration, salt water exposure, etc) lower MTBF values.

System MTBF (hours):

414101 @ 40°C (w/o PCB)



Fans usually shipped with Kontron Europe GmbH products have 50,000-hour typical operating life. The above estimates assume no fan, but a passive heat sinking arrangement. Estimated RTC battery life (as opposed to battery failures) is not accounted for in the above figures and need to be considered separately. Battery life depends on both temperature and operating conditions. When the Kontron unit has external power; the only battery drain is from leakage paths.

3.10 Mechanical Specification

Dimension

» 95.0 mm x 95.0 mm (3.75" x 3.75")


» Height approx. 12mm (0.4")



CAD drawings are available at [EMD CustomerSection](#)

Height



The COM Express® specification defines a module height of 13mm from bottom to heatspreader top:

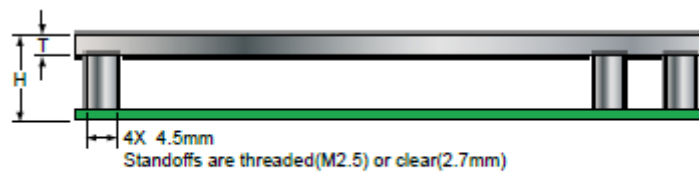

Thickness 'T' is implementation specific and may be 3mm.
Height 'H' (which includes PCB thickness) shall be 13.00mm

Cooling solutions provided from Kontron Europe GmbH for compact sized Computer-on-Modules are 27mm in height from module bottom to Heatsink top. Universal Cooling solutions to be mounted on the HSP (36099-0000-00-x) are 14.3mm in height for an overall height of 27.3mm from module bottom to Heatsink top.

3.11 Module Dimensions

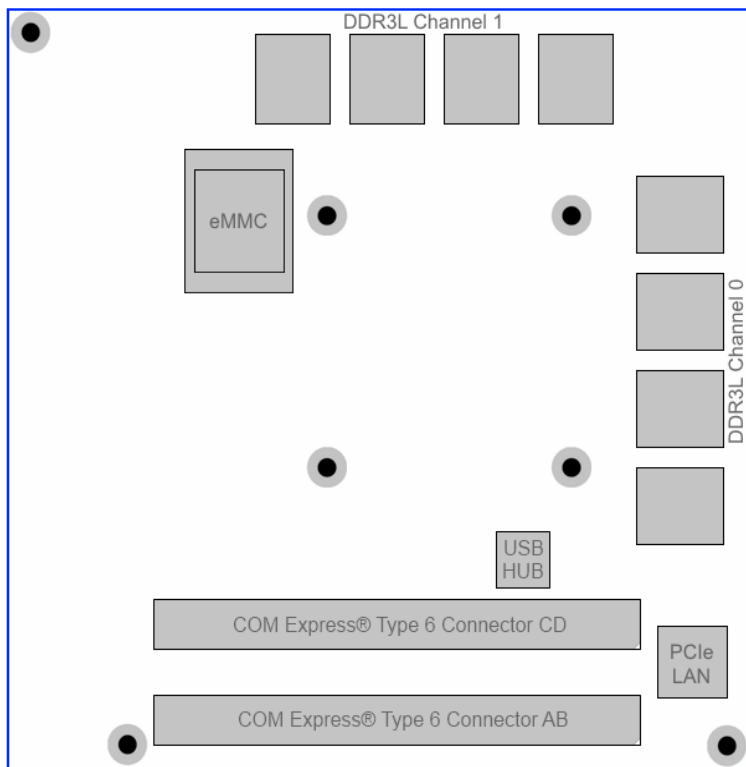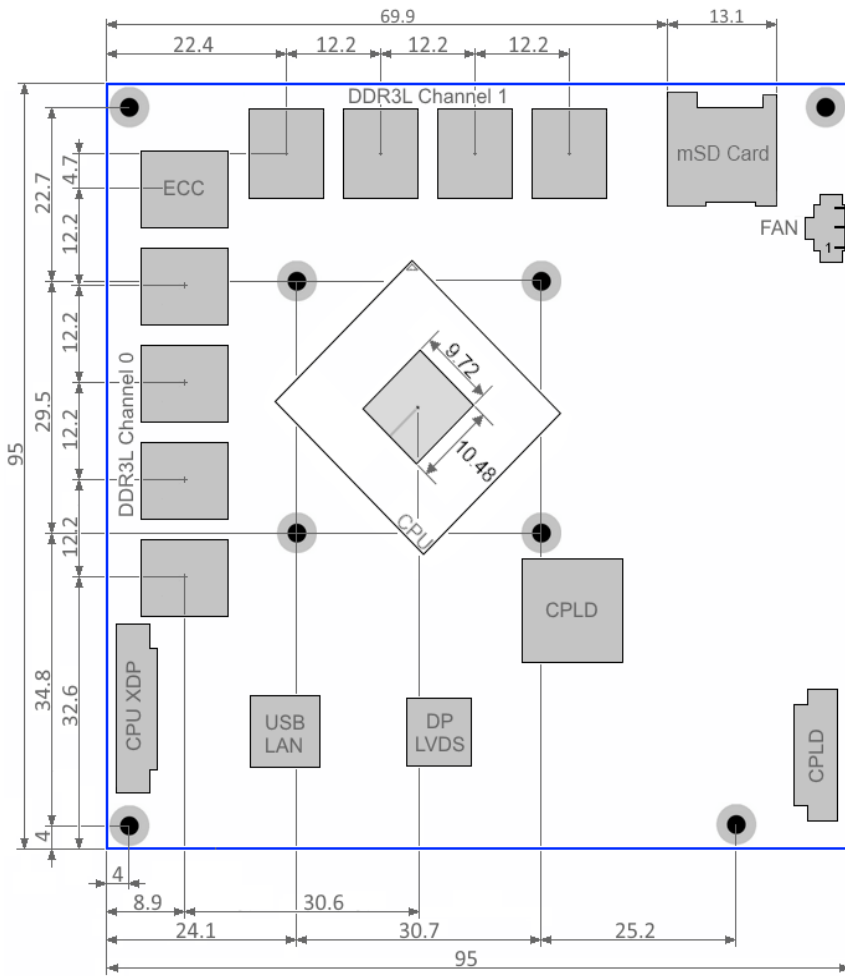



All dimensions in mm

3.12 Onboard Fan Connector

Specification

- » Part number (Molex) J3: 53261-0371
- » Mates with: 51021-0300
- » Crimp terminals: 50079-8100

Pin assignment

- » Pin1: Tacho, Pin2: VCC, Pin3: GND

Electrical characteristic

Module Input Voltage	4.75 - 13V	>13
FAN Output Voltage	4.75 - 13V	13V
Max. FAN Output Current	350mA	150mA

3.13 Thermal Management, Heatspreader and Cooling Solutions

A heatspreader plate assembly is available from Kontron Europe GmbH for the COMe-cBTi6R. The heatspreader plate on top of this assembly is NOT a heat sink. It works as a COM Express®-standard thermal interface to use with a heat sink or external cooling devices.

External cooling must be provided to maintain the heatspreader plate at proper operating temperatures. Under worst-case conditions, the cooling mechanism must maintain an ambient air and heatspreader plate temperature on any spot of the heatspreader's surface according the module specifications:

- » 60°C for commercial grade modules
- » 75°C for extended temperature grade modules (E1)
- » 85°C for industrial temperature grade modules (E2/XT)

The aluminum slugs and thermal pads or the heat-pipe on the underside of the heatspreader assembly implement thermal interfaces between the heatspreader plate and the major heat-generating components on the COMe-cBTi6R. About 80 percent of the power dissipated within the module is conducted to the heatspreader plate and can be removed by the cooling solution.

You can use many thermal-management solutions with the heatspreader plates, including active and passive approaches. The optimum cooling solution varies, depending on the COM Express® application and environmental conditions. Active or passive cooling solutions provided from Kontron Europe GmbH for the COMe-cBTi6R are usually designed to cover the power and thermal dissipation for a commercial grade temperature range used in a housing with proper air flow.

Documentation and CAD drawings of COMe-cBTi6R heatspreader and cooling solutions are provided at <http://emdcustomersection.kontron.com>.

4 Features and Interfaces

4.1 Onboard eMMC Flash

The COMe-cBTi6R features a 12x16mm onboard Kingston NAND Flash drive with capacities of 2-64GB eMMC. The Flash drive supports:

- » Compliant to JEDEC/eMMC standard version 4.4, 4.41 & 4.5
- » 1 bit, 4 bits or 8 bits data bus width support
- » Data transfer rate up to 52Mbyte/s using 8 parallel data lines at 52MHz
- » Single data rate up to 200Mbyte/s @ HS200 mode with 200MHz Host clock
- » Dual data rate up to 104Mbyte/s @ 52MHz
- » Error free memory access (ECC and enhanced data management)
- » TRIM support
- » Multi-Level-Cell (MLC) technology
- » Single-Level-Cell (SLC) technology
- » Industrial temperature grade -45 to +85°C

Flash Part No.	KE4CN2H5C-xxx	KE4CN3H5C-xxx	KE4CN4K6C-xxx	KE4CN5B6C-xxx	KE4CN6C6C-xxx
Nominal Flash Size MLC	4GByte	8GByte	16GByte	32GByte	64GByte
Nominal Flash Size pSLC	2GByte	4GByte	8GByte	16GByte	32GByte
JEDEC Standard	eMMC 4.5	eMMC 4.5	eMMC 4.5	eMMC 4.5	eMMC 4.5
Flash Technology	19nm	19nm	19nm	19nm	19nm
Sequential Read	85 MB/s	160 MB/s	166 MB/s	166 MB/s	166 MB/s
Sequential Write	12 MB/s	25 MB/s	25 MB/s	45 MB/s	25 MB/s
I/O Performance read/write	5000/1050 IOPS	5000/1350 IOPS	5000/1350 IOPS	4600/1450 IOPS	4600/1450 IOPS
Operating Temperature	-40 to +85°C	-40 to +85°C	-40 to +85°C	-40 to +85°C	-25 to +85°C
Package	FBGA153	FBGA153	FBGA169	FBGA169	FBGA169
Endurance (# of P/E cycles)	MLC 3k, SLC 30k	MLC 3k, SLC 30k	MLC 3k, SLC 30k	MLC 3k, SLC 30k	MLC 3k, SLC 30k



Note: the onboard eMMC Flash requires pre-configuration via EFI Shell before OS installation (e.g. diskpart utility)

4.2 Secure Digital Card

The COMe-cBTi6R supports an SDIO Interface to be used for micro/mini/standard SD Card sockets. Following SD Cards are validated from Kontron and recommended for use:

swissbit® S-200U & S-300U Series Industrial microSD Card

- » compliant to SD Card specification 2.0
- » Wear Leveling of static and dynamic data
- » High reliability (MTBF >3,000,000 hours, > 10,000 insertions)
- » Extended or Industrial Temperature range
- » up to 25MB/s data transfer speed

Delkin Devices Inc. MicroSD

- » compliant to SD Card specification 2.0
- » Wear Leveling and ECC
- » High reliability (MTBF >2,000,000 hours, > 2,000,000 write/erase cycles)
- » Industrial Temperature range
- » up to 17MB/s data transfer speed

Order information

Density	Manufacturer & Part.No.	Temperature range	mSD-SD Adapter
1GB SD1.1	swissbit SFSD1024N1BN1TO-I-DF-151-STD	-40°C to 85°C	No
2GB SD1.1	swissbit SFSD2048N1BW1MT-E-ME-111-STD	-25°C to 85°C	No
2GB SD1.1	Delkin SD02GHMSH-S2047-B	-40°C to 85°C	No
2GB SDHC	Delkin SD02GHMSH-S2000-B	-40°C to 85°C	Yes
4GB SDHC	swissbit SFSD4096N1BW1MT-E-DF-111-STD	-25°C to 85°C	No
4GB SDHC	Delkin SD04GHMSH-S2647-B	-40°C to 85°C	No
4GB SDHC	Delkin SD04GHMSH-S2600-B	-40°C to 85°C	Yes
8GB SDHC	Delkin SD08GHMSH-S2647-B	-40°C to 85°C	No
8GB SDHC	Delkin SD08GHMSH-S2600-B	-40°C to 85°C	Yes

4.3 S5 Eco Mode

Kontron's new high-efficient power-off state S5 Eco enables lowest power-consumption in soft-off state – less than 1 mA compared to the regular S5 state this means a reduction by at least factor 200!

In the "normal" S5 mode the board is supplied by 5V_Stb and needs usually up to 300mA just to stay off. This mode allows to be switched on by power button, RTC event and WakeOnLan, even when it is not necessary. The new S5 Eco mode reduces the current enormous.

The S5 Eco Mode can be enabled in BIOS Setup, when the BIOS supports this feature.

Following prerequisites and consequences occur when S5 Eco Mode is enabled

- » The power button must be pressed at least for 200ms to switch on.
- » Wake via Power button only.
- » "Power On After Power Fail"/"State after G3": only "stay off" is possible

4.4 Rapid Shutdown

Overview

For “R” or the “RXT” version of the COMe-cBTi6R, Kontron has implemented a rapid shutdown function. It works as follows:

1) An active-high shutdown signal is asserted by the COM Express carrier board via pin C67 of the COM Express connector. The characteristics of the shutdown signal are as follows:

- » Amplitude 5.0V +/- 5%
- » Source impedance ≤ 50 ohms
- » Rise time $\leq 1\mu\text{S}$
- » Duration $\geq 20\mu\text{S}$

The assertion of this signal causes all power regulators to be disabled and the internal power supply rails to be discharged by crowbar circuits. The shutdown circuitry provides internal energy storage that maintains crowbar activation for at least 2mS following the de-assertion of the shutdown signal. The circuit also incorporates a weak input pulldown resistor so that the RXT module will operate normally in systems where the rapid shutdown functionality is not used and pin C67 of the COM Express is left unconnected.

2) Simultaneously with the leading edge of shutdown, the 12V (main) input power to the RXT module is removed and these input power pins are externally clamped to ground through a crowbar circuit located on the COM Express carrier board. This external clamping circuit must maintain a maximum resistance of approximately 1 ohm and be activated for a minimum of 2mS.

3) Simultaneously with the leading edge of shutdown, the 5V (standby) input power to the RXT module is removed, if present. External clamping on these pins is not necessary.

Crowbar implementation details

As a tool for designing the internal crowbars, Kontron developed tallied the total capacitance present on each of the internal power rails, and calculates the required discharge resistance in order to achieve the desired voltage decay time constant. The principal design criteria are that each supply rail must decay to 37% of initial value (equivalent to 1RC) within 250uS, and to below 1.5V within 2mS. Analysis shows that the power rails fall into four general classes. Each class of power rails has a corresponding discharge strategy.

1) Power Input Rails: The main 12V power input rail incorporates about 300uF of distributed capacitance. This rail must be discharged by an external crowbar located on the carrier board, which must provide a shunt resistance of approximately 1 ohm. The peak power dissipation in this crowbar resistance will be relatively high (on the order of 150W when the crowbar is activated), but will diminish very rapidly as the input capacitors discharge.

2) Low Voltage, High Power Rails: Each of these 5 “major” internal supply rails has an output voltage in the 1.0 V to 1.5V range, and each rail has between 1500uF and 3300uF of output capacitance. The required discharge resistances for these rails are in the range of 0.1 to 0.2 ohm, and peak discharge currents are in the range of 8 to 16A.

The discharge circuit for each rail is implemented with a “pulse withstanding” thick-film SMT resistor in series with a low-RDSon MOSFET. The resistor peak powers are in the 8W to 20W range; depending on PCB layout considerations either a single resistor or multiple smaller resistors may be used to achieve sufficient pulse handling capability.

Because of the relatively high currents in the discharge paths, these crowbar circuits require wide copper traces and careful component placement adjacent to the output components of the corresponding power supplies.

3) Low Voltage, Low Power Rails: These rails have voltages of 1.8V or less and capacitances under 1000uF, with peak discharge currents $< 3\text{A}$. The discharge circuits for these rails are also implemented with resistor(s) and a low-RDSon

MOSFET. In some cases, the peak pulse power dissipation in the resistor(s) is low enough that specialty “pulse withstanding” resistors are not required.

4) Medium Voltage Rails: These 3.3V and 5V rails typically have relatively small output capacitances and peak discharge currents <1A. The discharge circuits for these rails are typically implemented with conventional resistor(s) and a low-RDSon MOSFET.

Shutdown input circuit details

The shutdown input pin to the RXT module is coupled through a series Schottky diode and a small series resistor to the gates of all crowbar MOSFETs, connected in parallel. All crowbar MOSFETs are N-channel “logic level” parts that have are specified for operation at $V_{gs} = 4.5V$. Three additional components are connected in parallel between the MOSFET gates and ground:

- » A capacitor that provides energy storage to keep the MOSFETs conducting for several mS after the shutdown signal is de-asserted.
- » A high-value resistor that provides a discharge path for the capacitor as well as a pulldown resistance (to insure that the shutdown circuits remain inactive if the shutdown pin is left floating).
- » A 6.2V zener diode that protects the MOSFET gates from damage due to input ESD or input overdrive.

In order to insure that the crowbars do not “fight” active switching regulators while the input capacitors are being discharged, the shutdown circuit rapidly crowbars the 5V rail, with a time constant <10 μ S. The 5V rail powers most of the remaining switching regulators, and as its voltage falls below about 4V those regulators enter under-voltage lockout mode and cease to operate. Additionally, by using the UVLO mechanism in the design of the RXT module, Kontron minimizes the risk of inadvertently affecting the standard power sequencing logic for such RXT modules. Two of the switching regulators do not require the 5V supply for operation, and in those two cases it will be necessary to clamp the enable inputs to ground when shutdown begins.

4.5 LPC

The Low Pin Count (LPC) Interface signals are connected to the LPC Bus bridge located in the CPU or chipset. The LPC low speed interface can be used for peripheral circuits such as an external Super I/O Controller, which typically combines legacy-device support into a single IC. The implementation of this subsystem complies with the COM Express® Specification. Implementation information is provided in the COM Express® Design Guide maintained by PICMG. Please refer to the official PICMG documentation for additional information.

The LPC bus does not support DMA (Direct Memory Access) and a clock buffer is required when more than one device is used on LPC. This leads to limitations for ISA bus and SIO (standard I/O 's like Floppy or LPT interfaces) implementations.

All Kontron COM Express® Computer-on-Modules imply BIOS support for following external baseboard LPC Super I/O controller features for the **Winbond/Nuvoton 5V 83627HF/G and 3.3V 83627DHG-P**:

83627HF/G	Phoenix BIOS	AMI Core 8	Phoenix Tiano	AMI Aptio 4	AMI Aptio V
PS/2	YES	YES	YES	YES	NO
COM1/COM2	YES	YES	YES	YES	YES
LPT	YES	YES	YES	YES	YES
HWM	YES	YES	NO	NO	NO
Floppy	NO	NO	NO	NO	NO
GPIO	NO	NO	NO	NO	NO
83627DHG-P	Phoenix BIOS	AMI Core 8	Phoenix Tiano	AMI Aptio 4	AMI Aptio V
PS/2	YES	YES	YES	YES	NO
COM1/COM2	YES	YES	YES	YES	YES
LPT	YES	YES	YES	YES	YES
HWM	NO	NO	NO	NO	NO
Floppy	NO	NO	NO	NO	NO
GPIO	NO	NO	NO	NO	NO

Features marked as not supported do not exclude OS support (e.g. HWM can be accessed via SMB). For any other LPC Super I/O additional BIOS implementations are necessary. Please contact your local sales or support for further details.

4.6 Serial Peripheral Interface (SPI)

The Serial Peripheral Interface Bus or SPI bus is a synchronous serial data link standard named by Motorola that operates in full duplex mode. Devices communicate in master/slave mode where the master device initiates the data frame. Multiple slave devices are allowed with individual slave select (chip select) lines. Sometimes SPI is called a “four wire” serial bus, contrasting with three, two, and one wire serial buses.



The SPI interface can only be used with a SPI flash device to boot from external BIOS on the baseboard.

4.7 SPI boot

The COMe-cBTi6R supports boot from an external SPI Flash. It can be configured by pin A34 (BIOS_DIS#0) and pin B88 (BIOS_DIS1#) in following configuration:

BIOS_DIS0#	BIOS_DIS1#	Function
open	open	Boot on-module BIOS
GND	open	Boot baseboard LPC FWH
open	GND	Baseboard SPI = Boot Device 1, on-module SPI = Boot Device 2
GND	GND	Baseboard SPI = Boot Device 2, on-module SPI = Boot Device 1



By default only SPI Boot Device 1 is used in configuration 3 & 4. Both SPI Boot Devices are used by splitting the BIOS with modified descriptor table in customized versions only

Recommended SPI boot flash types for 8-SOIC package

Size	Manufacturer	Part Number	Device ID
16Mbit	Atmel	AT26DF161	0x1F4600
16Mbit	Atmel	AT26DF161A	0x1F4601
16Mbit	Atmel	AT25DF161	0x1F4602
16Mbit	Atmel	AT25DQ161	0x1F8600
16Mbit	Macronix	MX25L1605A(D)(36E)(06E)	0xC22015
16Mbit	Macronix	MX25L1635D	0xC22415
16Mbit	SST/Microchip	SST25VF016B	0xBF2541
16Mbit	Winbond	W25X16BV	0xEF3015
16Mbit	Winbond	W25Q16BV(CV)	0xEF4015
Size	Manufacturer	Part Number	Device ID
32Mbit	Atmel	AT25/26DF321	0x1F4700
32Mbit	Atmel	AT25DF321A	0x1F4701
32Mbit	Macronix	MX25L3205A(D)(06E)	0xC22016
32Mbit	Macronix	MX25L3225D(35D)(36D)	0xC25E16
32Mbit	SST/Microchip	SST25VF032B	0xBF254A
32Mbit	Winbond	W25X32BV	0xEF3016
32Mbit	Winbond	W25Q32BV,	0xEF4016
Size	Manufacturer	Part Number	Device ID
64Mbit	Atmel	AT25DF641(A)	0x1F4800
64Mbit	Atmel	AT25DQ641	0x1F8800
64Mbit	Macronix	MX25L6405D(45E)(36E)(06E)(73E)	0xC22017
64Mbit	Macronix	MX25L6455E	0xC22617
64Mbit	Macronix	MX25U6435F	0xC22537
64Mbit	SST/Microchip	SST25VF064C	0xBF254B
64Mbit	Winbond	W25X64BV	0xEF3017
64Mbit	Winbond	W25Q64BV(CV)(FV)	0xEF4017
64Mbit	Winbond	W25Q64DW	0XEF6017
64Mbit	Winbond	W25Q64FW	0XEF6017

Using an external SPI flash

To program an external SPI flash follow these steps:

- » Connect a SPI flash with correct size (similar to BIOS ROM file size) to the module SPI interface
- » Open pin A34 and B88 to boot from the module BIOS
- » Boot the module to DOS/EFI-Shell with access to the BIOS image and Firmware Update Utility provided on EMD Customer Section
- » Connect pin B88 (BIOS_DIS1#) to ground to enable the external SPI flash
- » Execute Flash.bat/Flash.efi to program the complete BIOS image to the external SPI flash
- » reboot

Your module will now boot from the external SPI flash when BIOS_DIS1# is grounded.

External SPI flash on Modules with Intel® ME

If booting from the external (baseboard mounted) SPI flash then exchanging the COM Express® module for another one of the same type will cause the Intel® Management Engine to fail during next start. This is by design of the ME because it bounds itself to the very module it has been flashed to. In the case of an external SPI flash this is the module present at flash time.

To avoid this issue please make sure to conduct a complete flash of the external SPI flash device after changing the COMexpress module for another one. If disconnecting and reconnecting the same module again this step is not necessary.

4.8 M.A.R.S.

The Smart Battery implementation for Kontron Computer-on-Modules called **Mobile Application for Rechargeable Systems** is a BIOS extension for external Smart Battery Manager or Charger. It includes support for SMBus charger/selector (e.g. Linear Technology LTC1760 Dual Smart Battery System Manager) and provides ACPI compatibility to report battery information to the Operating System.

Reserved SM-Bus addresses for Smart Battery Solutions on the carrier:

8-bit Address	7-bit Address	Device
12h	0x09	SMART_CHARGER
14h	0x0A	SMART_SELECTOR
16h	0x0B	SMART_BATTERY

4.9 UART

The COMe-cBTi6R supports up to two Serial RX/TX only Ports defined in COM Express® specification on Pins A98/A99 for UART0 and Pins A101/A102 for UART1. The implementation of the UART is compatible to 16450 and is supported by default from most operating systems. Resources are subordinated to other UARTS e.g. from external LPC Super I/O.

UART features:

- » 450 to 115.2k Baud (except 56000)
- » 5, 6, 7 or 8bit characters
- » 1 or 2 Stop bit generation
- » Even, odd or no-parity generation/detection
- » Complete status reporting capabilities
- » Line break generation and detection
- » Full prioritized interrupt system control
- » No FIFO
- » One additional shift register for transmit and one for receive
- » No Flow Control
- » No FCR register due to unavailability of FIFO
- » MCR and MSR registers only implemented in loopback mode for compatibility with existing drivers and APIs
- » Initialized per default to COM3 3F8h/IRQ4 and COM4 2F8/IRQ3 without external SIO
- » Initialized per default to COM3 3E8h/IRQ5 and COM4 2E8/IRQ10 with external SIO present

The UART clock is generated by the 33MHz LPC clock which results in an accuracy of 0.5% on all UART timings



- Due to the protection circuitry required according COM Express® specification the transfer speed can only be guaranteed for 9600 Baud. Please contact your local sales or support for customized versions without protection circuitry

- Legacy console redirection via onboard serial ports may be restricted in terms of serial input stream. Since they're only emulating a 16450 device (w/o FIFO) an input stream generated by a program may lose characters. Inputs from a keyboard via terminal program will be safe.

4.10 Fast I2C

The COMe-cBTi6R supports a CPLD implemented LPC to I2C bridge using the WISHBONE I2C Master Core provided from opencores.org. The I2C Interface supports transfer rates up to 40kB/s and can be configured in Setup

Specification for external I2C:

- » Speed up to 400kHz
- » Compatible to Philips I2C bus standard
- » Multi-Master capable
- » Clock stretching support and wait state generation
- » Interrupt or bit-polling driven byte-by-byte data-transfers
- » Arbitration lost interrupt with automatic transfer cancellation
- » Start/Stop signal generation/detection
- » Bus busy detection
- » 7bit and 10bit addressing

4.11 Dual Staged Watchdog Timer

Basics

A watchdog timer (or computer operating properly (COP) timer) is a computer hardware or software timer that triggers a system reset or other corrective action if the main program, due to some fault condition, such as a hang, neglects to regularly service the watchdog (writing a "service pulse" to it, also referred to as "kicking the dog", "petting the dog", "feeding the watchdog" or "triggering the watchdog"). The intention is to bring the system back from the nonresponsive state into normal operation.

The COMe-cBTi6R offers a watchdog which works with two stages that can be programmed independently and used one by one.

Time-out events

Reset	A reset will restart the module and starts POST and operating system new.
NMI	A non-maskable interrupt (NMI) is a computer processor interrupt that cannot be ignored by standard interrupt masking techniques in the system. It is typically used to signal attention for non-recoverable hardware errors.
SCI	A system control interrupt (SCI) is a OS-visible interrupt to be handled by the OS using AML code
Delay	Might be necessary when an operating system must be started and the time for the first trigger pulse must extended. (Only available in the first stage)
WDT Signal only	This setting triggers the WDT Pin on baseboard connector (COM Express® Pin B27) only
Cascade:	Does nothing, but enables the 2nd stage after the entered time-out.

WDT Signal

B27 on COM Express® Connector offers a signal that can be asserted when a watchdog timer has not been triggered within time. It can be configured to any of the 2 stages. Deassertion of the signal is automatically done after reset. If deassertion during runtime is necessary please ask your Kontron technical support for further help.

4.12 Speedstep Technology

The Intel® processors offer the Intel® Enhanced SpeedStep™ technology that automatically switches between maximum performance mode and battery-optimized mode, depending on the needs of the application being run. It enables you to adapt high performance computing on your applications. When powered by a battery or running in idle mode, the processor drops to lower frequencies (by changing the CPU ratios) and voltage, conserving battery life while maintaining a high level of performance. The frequency is set back automatically to the high frequency, allowing you to customize performance.

In order to use the Intel® Enhanced SpeedStep™ technology the operating system must support SpeedStep™ technology.

By deactivating the SpeedStep feature in the BIOS, manual control/modification of CPU performance is possible. Setup the CPU Performance State in the BIOS Setup or use 3rd party software to control CPU Performance States.

4.13 C-States

New generation platforms include power saving features like SuperLFM, EIST (P-States) or C-States in O/S idle mode.

Activated C-States are able to dramatically decrease power consumption in idle mode by reducing the Core Voltage or switching of parts of the CPU Core, the Core Clocks or the CPU Cache.

Following C-States are defined:

C-State	Description	Function
C0	Operating	CPU fully turned on
C1	Halt State	Stops CPU main internal clocks via software
C1E	Enhanced Halt	Similar to C1, additionally reduces CPU voltage
C2	Stop Grant	Stops CPU internal and external clocks via hardware
C2E	Extended Stop Grant	Similar to C2, additionally reduces CPU voltage
C3	Deep Sleep	Stops all CPU internal and external clocks
C3E	Extended Stop Grant	Similar to C3, additionally reduces CPU voltage
C4	Deeper Sleep	Reduces CPU voltage
C4E	Enhanced Deeper Sleep	Reduces CPU voltage even more and turns off the memory cache
C6	Deep Power Down	Reduces the CPU internal voltage to any value, including 0V
C7	Deep Power Down	Similar to C6, additionally LLC (LastLevelCache) is switched off

C-States are usually enabled by default for low power consumption, but active C-States may influence performance sensitive applications or real-time systems.

» Active C6-State may influence data transfer on external Serial Ports

» Active C7-State may cause lower CPU and Graphics performance

It's recommended to disable C-States / Enhanced C-States in BIOS Setup if any problems occur.

4.14 Graphics Features

The integrated Intel® HD Graphics (Gen 7) graphics supports following OS dependent featureset:

O/S	Win8 / WES8	Win7 / WES7	WEC7	Linux (F18/Yocto1.6)	Linux (Tizen IVI 32b)	Android 4.2/4.4
DisplayPort	DP 1.1a up to 2560×1600					not supported
HDMI (via external LS)	HDMI 1.4a up to 1920×1200					
VGA (COMe-compact only)	up to 2560×1600					not supported
eDP	eDP 1.3 up to 2560×1600 or LVDS up to 1920×1080 via eDP-LVDS Bridge					
Dual Independent Display	Yes					
2D HW acceleration	DirectDraw			X Server	Wayland Compositor	OpenGL Renderer
3D HW acceleration	OGL4.0, DX11.1/10/9		OGLES 2.0	OGL3.2/OGLES2.0		OGLES 1.1/2.0 in 4.2 OGLES 1.1/2.0/3.0 in 4.4 KitKat
HW Media Acceleration	DXVA 2		DirectShow	VAAPI	OGL3.2/OGLES2.0	OpenMax
HW Video Decode	H.264,MPEG2,VC1,VP8		H.264,MPEG2,VC1	H.264,MPEG2,VC1,VP8	H.264,MPEG2,VC1,VP8	H.264,H.263,VC1,WMV 9,VP8,MPEG4 in 4.2 H.264, VC1 in 4.4
HW Video Encode	H.264,MPEG2		not supported	H.264,MPEG2	H.264,MPEG2	H.264
Blu-Ray	v2.0					not supported
Media players	Windows Media Player PowerDVD		CEPlayer	GStreamer - VAAPI		Gallery, Widevine
Content Protection*	PAVP	HDCP	not supported			Widevine L1

* Supported with active TXE Engine only (available with custom BIOS only)

4.15 ACPI Suspend Modes and Resume Events

The COMe-cBTi6R supports the S-states S0, S3, S4, S5. S5eco Support: YES

The following events resume the system from S3:

- » USB Keyboard (1)
- » USB Mouse (1)
- » Power Button
- » WakeOnLan (2)

The following events resume the system from S4:

- » Power Button
- » WakeOnLan (2)

The following events resume the system from S5:

- » Power Button
- » WakeOnLan (2)


The following events resume the system from S5Eco:

- » Power Button



- (1) OS must support wake up via USB devices and baseboard must power the USB Port with StBy-Voltage
- (2) Depending on the Used Ethernet MAC/Phy WakeOnLan must be enabled in BIOS setup and driver options

4.16 USB

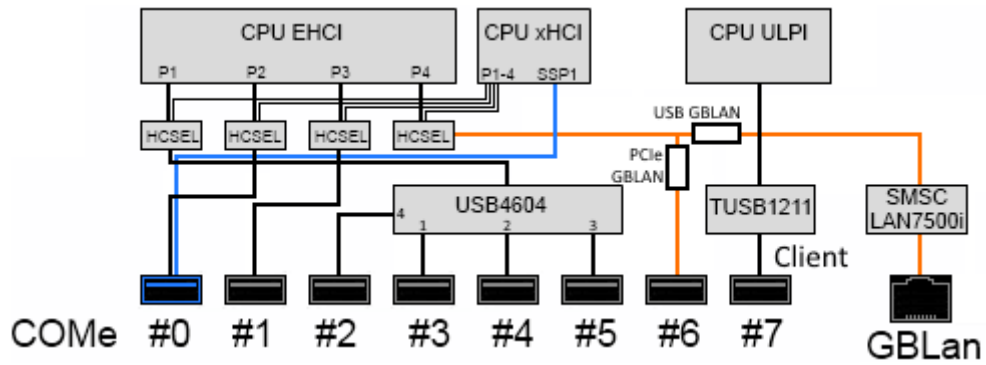

The COMe-cBTi6R supports 7x USB 2.0/1x USB 3.0 with following internal EHCI/xHCI configuration:

5 System Resources

5.1 Internal I2C Bus

8-bit Address	7-bit Address	Device	Comment
58h	0x2C	S5eco resistor	Do not use under any circumstances
5Ah	0x2D	USB HSIC Hub	Do not use under any circumstances
C0h	0x60	LVDS bridge	Do not use under any circumstances
A0h	0x50	LVDS EEPROM	Reserved for external LVDS EEPROM for Panel Data

5.2 External I2C Bus

8-bit Address	7-bit Address	Device	Comment
A0h	0x50	Module EEPROM	Do not use under any circumstances
AEh	0x57	Carrier EEPROM	Not to be used with any SM bus device except the Baseboard EEPROM (FRUPROM)


5.3 System Management (SM) Bus

8-bit Address	7-bit Address	Device	Comment
A0h	0x50	DDR3L SPD DRAM0	Do not use under any circumstances
30h	0x18	DDR3L Thermal sensor option	Do not use under any circumstances
A2h	0x51	DDR3L SPD DRAM1	Do not use under any circumstances
32h	0x19	DDR3L Thermal sensor option	Do not use under any circumstances
58h	0x2C	HWMonitor	Do not use under any circumstances
12h	0x09	SMART_CHARGER	Not to be used with any SM bus device except a charger
14h	0x0A	SMART_SELECTOR	Not to be used with any SM bus device except a selector
16h	0x0B	SMART_BATTERY	Not to be used with any SM bus device except a battery

6 Connectors

The pinouts for Interface Connectors X1A and X1B are documented for convenient reference. Please see the COM Express™ Specification and COM Express™ Design Guide for detailed, design-level information.

6.1 Connector Location

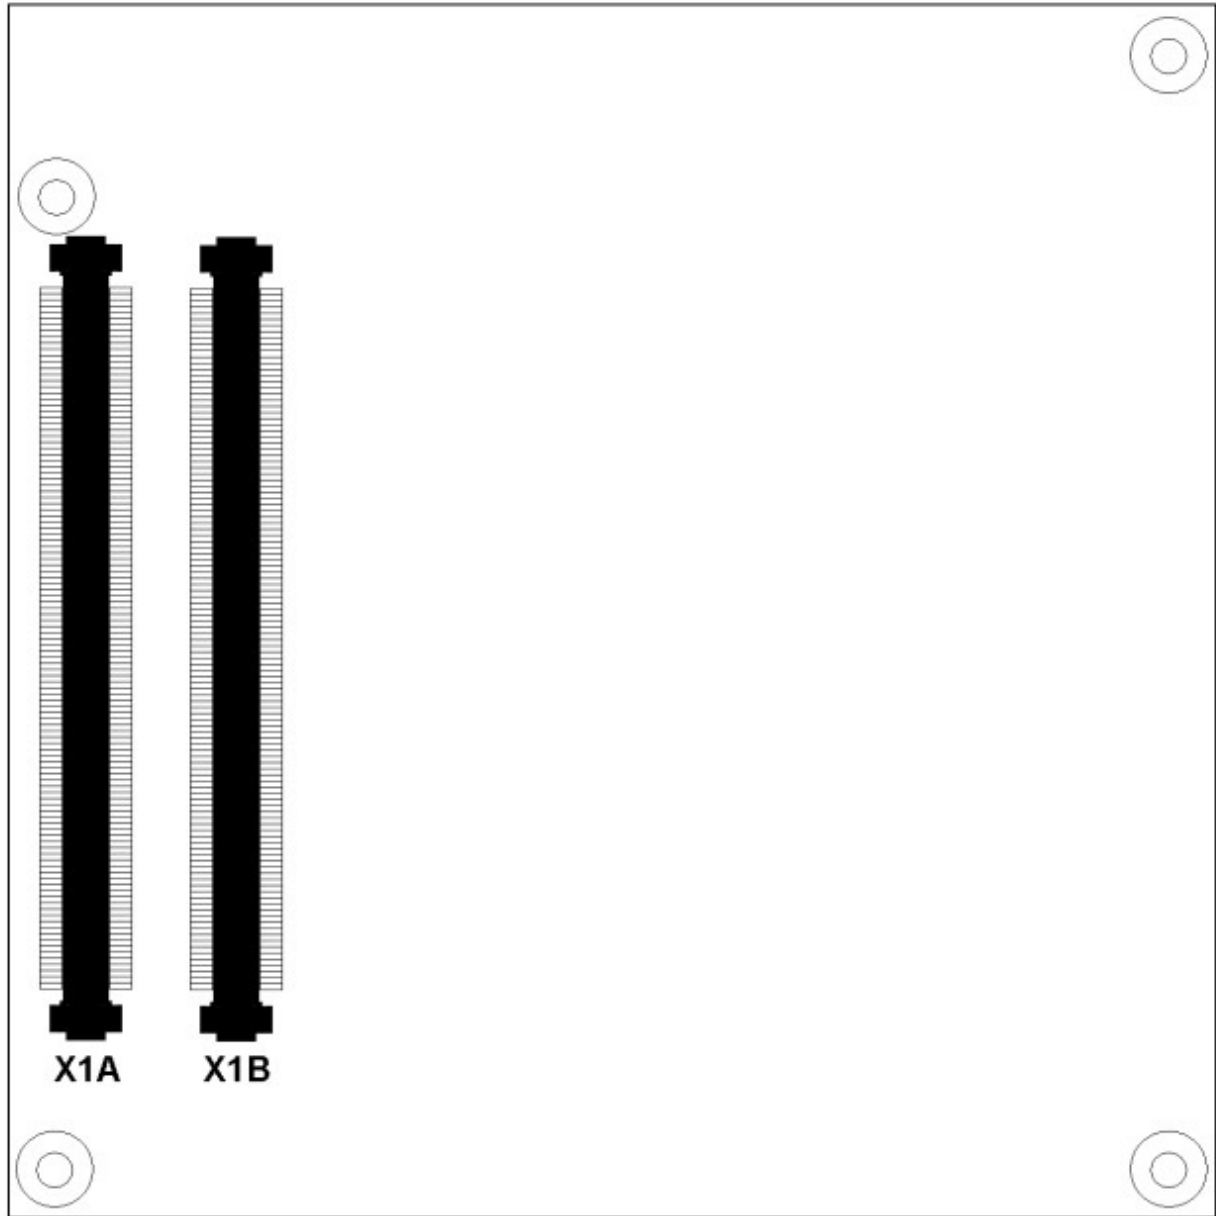

bottom view
(connectors only)



side view
(connectors only)

7 Pinout List

7.1 General Signal Description

Type	Description
I/O-3,3	Bi-directional 3,3 V I/O-Signal
I/O-5T	Bi-dir. 3,3V I/O (5V Tolerance)
I/O-5	Bi-directional 5V I/O-Signal
I-3,3	3,3V Input
I/OD	Bi-directional Input/Output Open Drain
I-5T	3,3V Input (5V Tolerance)
OA	Output Analog
OD	Output Open Drain
O-1,8	1,8V Output
O-3,3	3,3V Output
O-5	5V Output
DP-I/O	Differential Pair Input/Output
DP-I	Differential Pair Input
DP-O	Differential Pair Output
PU	Pull-Up Resistor
PD	Pull-Down Resistor
PWR	Power Connection



To protect external power lines of peripheral devices, make sure that: the wires have the right diameter to withstand the maximum available current the enclosure of the peripheral device fulfills the fire-protection requirements of IEC/EN60950

7.2 Connector X1A Row A

Pin	Signal	Description	Type	Termination	Comment
A1	GND1	Power Ground	PWR GND	-	-
A2	GBE0_MDI3-	Ethernet Media Dependent Interface 3 -	DP-I/O	-	-
A3	GBE0_MDI3+	Ethernet Media Dependent Interface 3 +	DP-I/O	-	-
A4	GBE0_LINK100#	Ethernet Speed LED	OD	-	-
A5	GBE0_LINK1000#	Ethernet Speed LED	OD	-	-
A6	GBE0_MDI2-	Ethernet Media Dependent Interface 2 -	DP-I/O	-	-
A7	GBE0_MDI2+	Ethernet Media Dependent Interface 2 +	DP-I/O	-	-
A8	GBE0_LINK#	LAN Link LED	OD	-	-
A9	GBE0_MDI1-	Ethernet Media Dependent Interface 1 -	DP-I/O	-	-
A10	GBE0_MDI1+	Ethernet Media Dependent Interface 1 +	DP-I/O	-	-
A11	GND	Power Ground	PWR GND	-	-
A12	GBE0_MDI0-	Ethernet Media Dependent Interface 0 -	DP-I/O	-	-
A13	GBE0_MDI0+	Ethernet Media Dependent Interface 0 +	DP-I/O	-	-
A14	GBE0_CTREF	Center Tab Reference Voltage	0	3.3V and 110nF cap to GND	USB LAN variant only
A15	SUS_S3#	Suspend To RAM (or deeper) Indicator	0-3.3	-	-
A16	SATA0_TX+	SATA Transmit Pair 0 +	DP-0	-	-
A17	SATA0_TX-	SATA Transmit Pair 0 -	DP-0	-	-
A18	SUS_S4#	Suspend To Disk (or deeper) Indicator	0-3.3	-	-
A19	SATA0_RX+	SATA Receive Pair 0 +	DP-I	-	-
A20	SATA0_RX-	SATA Receive Pair 0 -	DP-I	-	-
A21	GND	Power Ground	PWR GND	-	-
A22	SATA2_TX+	USB 3.0 Receive Pair 0 -	DP-I	-	-
A23	SATA2_TX-	USB 3.0 Receive Pair 0 +	DP-I	-	-
A24	SUS_S5#	Soft Off Indicator	0-3.3	-	-
A25	SATA2_RX+	USB 3.0 Receive Pair 1 -	DP-I	-	-
A26	SATA2_RX-	USB 3.0 Receive Pair 1 +	DP-I	-	-
A27	BATLOW#	Battery Low	I-3.3	PU 10k 3.3V (S5)	assertion will prevent wake from S3-S5 state
A28	ATA_ACT#	Serial ATA activity LED	OD-3.3	-	-
A29	HDA_SYNC	HD Audio Sync	0-3.3	PU in level translator(U32)	Level translator provides 4k PU when signal is driving high and 40k pull up when signal is driving low
A30	HDA_RST#	HD Audio Reset	0-3.3	PU in level translator(U32)	Level translator provides 4k PU when signal is driving high and 40k pull up when signal is driving low
A31	GND	Power Ground	PWR GND	-	-
A32	HDA_CLK	HD Audio Bit Clock Output	0-3.3	PU in level translator(U32)	Level translator provides 4k PU when signal is driving high and 40k pull up when signal is driving low
A33	HDA_SDOUT	HD Audio Serial Data Out	0-3.3	PU in level translator(U32)	Level translator provides 4k PU when signal is driving high and 40k pull up when signal is driving low
A34	BIOS_DIS0#	BIOS Selection Strap 0	I-3.3	PU 10k 3.3V (S0)	-
A35	THRMTRIP#	Thermal Trip	0-3.3	PU 10k 3.3V (S0)	-
A36	USB6-	USB 2.0 Data Pair Port 6 -	DP-I/O	-	-
A37	USB6+	USB 2.0 Data Pair Port 6 +	DP-I/O	-	-
A38	USB_6_7_OC#	USB Overcurrent Indicator Port 6/7	I-3.3	PU 10k 3.3V (S5)	-
A39	USB4-	USB 2.0 Data Pair Port 4 -	DP-I/O	-	-
A40	USB4+	USB 2.0 Data Pair Port 4 +	DP-I/O	-	-
A41	GND	Power Ground	PWR GND	-	-
A42	USB2-	USB 2.0 Data Pair Port 2 -	DP-I/O	-	-
A43	USB2+	USB 2.0 Data Pair Port 2 +	DP-I/O	-	-
A44	USB_2_3_OC#	USB Overcurrent Indicator Port 2/3	I-3.3	PU 10k 3.3V (S5)	-
A45	USB0-	USB 2.0 Data Pair Port 0 -	DP-I/O	-	-
A46	USB0+	USB 2.0 Data Pair Port 0 +	DP-I/O	-	-
A47	VCC_RTC	Real-Time Clock Circuit Power Input	PWR 3V	-	-
A48	EXCDO_PERST#	Express Card Reset Port 0	0-3.3	-	-
A49	EXCDO_CPPE#	Express Card Capable Card Request Port 0	I-3.3	PU 10k 3.3V (S0)	-
A50	LPC_SERIRQ	Serial Interrupt Request	I/OD-3.3	PU in level translator(U32)	Level translator provides 4k PU when signal is driving high and 40k pull up when signal is driving low
A51	GND	Power Ground	PWR GND	-	-
A52	PCIE_TX5+	Not Connected	nc	-	-
A53	PCIE_TX5-	Not Connected	nc	-	-
A54	GPIO	General Purpose Input 0	I-3.3	-	-
A55	PCIE_TX4+	Not Connected	nc	-	-
A56	PCIE_TX4-	Not Connected	nc	-	-
A57	GND	Power Ground	PWR GND	-	-

A58	PCIE_TX3+	PCI Express Lane 3 Transmit +	DP-0	-	only available on USB-LAN var.
A59	PCIE_TX3-	PCI Express Lane 3 Transmit -	DP-0	-	only available on USB-LAN var.
A60	GND	Power Ground	PWR GND	-	-
A61	PCIE_TX2+	PCI Express Lane 2 Transmit +	DP-0	-	-
A62	PCIE_TX2-	PCI Express Lane 2 Transmit -	DP-0	-	-
A63	GPI1	General Purpose Input 1	I-3.3	-	-
A64	PCIE_TX1+	PCI Express Lane 1 Transmit +	DP-0	-	-
A65	PCIE_TX1-	PCI Express Lane 1 Transmit -	DP-0	-	-
A66	GND	Power Ground	PWR GND	-	-
A67	GPI2	General Purpose Input 2	I-3.3	-	-
A68	PCIE_TX0+	PCI Express Lane 0 Transmit +	DP-0	-	-
A69	PCIE_TX0-	PCI Express Lane 0 Transmit -	DP-0	-	-
A70	GND	Power Ground	PWR GND	-	-
A71	LVDS_A0+	LVDS Channel A DAT0+	DP-0	-	-
A72	LVDS_A0-	LVDS Channel A DAT0-	DP-0	-	-
A73	LVDS_A1+	LVDS Channel A DAT1+	DP-0	-	-
A74	LVDS_A1-	LVDS Channel A DAT1-	DP-0	-	-
A75	LVDS_A2+	LVDS Channel A DAT2+	DP-0	-	-
A76	LVDS_A2-	LVDS Channel A DAT2-	DP-0	-	-
A77	LVDS_VDD_EN	LVDS Panel Power Control	0-3.3	PD 100k	-
A78	LVDS_A3+	LVDS Channel A DAT3+	DP-0	-	-
A79	LVDS_A3-	LVDS Channel A DAT3-	DP-0	-	-
A80	GND	Power Ground	PWR GND	-	-
A81	LVDS_A_CLK+	LVDS Channel A Clock+	DP-0	-	20-80MHz
A82	LVDS_A_CLK-	LVDS Channel A Clock-	DP-0	-	20-80MHz
A83	LVDS_I2C_CLK	LVDS I2C Clock (DDC)	IO-3.3	PU 2k21 3.3V (S0)	-
A84	LVDS_I2C_DAT	LVDS I2C Data (DDC)	IO-3.3	PU 2k21 3.3V (S0)	-
A85	GPI3	General Purpose Input 3	I/0-3.3	-	-
A86	RSVD	Reserved for future use	nc	-	-
A87	RSVD	Reserved for future use	nc	-	-
A88	PCIE0_CLK_REF+	Reference PCI Express Clock +	DP-0	-	-
A89	PCIE0_CLK_REF-	Reference PCI Express Clock -	DP-0	-	-
A90	GND	Power Ground	PWR GND	-	-
A91	SPI_POWER	3.3V Power Output Pin for external SPI flash	0-3.3	-	-
A92	SPI_MISO	SPI Master IN Slave OUT	I-3.3	PU in level transalator(U55)	Level transalator provides 4k PU when signal is driving high and 40k pull up when signal is driving low
A93	GPO0	General Purpose Output 0	0-3.3	-	-
A94	SPI_CLK	SPI Clock	0-3.3	PU in level transalator(U55)	Level transalator provides 4k PU when signal is driving high and 40k pull up when signal is driving low
A95	SPI_MOSI	SPI Master Out Slave In	0-3.3	PU in level transalator(U55)	Level transalator provides 4k PU when signal is driving high and 40k pull up when signal is driving low
A96	TPM_PP	TPM Physical Presence	nc	-	-
A97	TYPE10#	Indicates TYPE10# to carrier board	nc	-	-
A98	SER0_TX	Serial Port 0 TXD	0-3.3	-	20V protection circuit implemented on module
A99	SER0_RX	Serial Port 0 RXD	I-5T	PU 10k (S0)	20V protection circuit implemented on module
A100	GND	Power Ground	PWR GND	-	-
A101	SER1_TX	Serial Port 1 TXD	0-3.3	-	20V protection circuit implemented on module
A102	SER1_RX	Serial Port 1 RXD	I-5T	PU 10k (S0)	20V protection circuit implemented on module
A103	LID#	LID Switch Input	I-3.3	PU 10k 3.3V (S5)	20V protection circuit implemented on module
A104	VCC_12V	Main Input Voltage (4.75-20V)	PWR 4.75-20V	-	-
A105	VCC_12V	Main Input Voltage (4.75-20V)	PWR 4.75-20V	-	-
A106	VCC_12V	Main Input Voltage (4.75-20V)	PWR 4.75-20V	-	-
A107	VCC_12V	Main Input Voltage (4.75-20V)	PWR 4.75-20V	-	-
A108	VCC_12V	Main Input Voltage (4.75-20V)	PWR 4.75-20V	-	-
A109	VCC_12V	Main Input Voltage (4.75-20V)	PWR 4.75-20V	-	-
A110	GND	Power Ground	PWR GND	-	-

7.3 Connector X1A row B

Pin	Signal	Description	Type	Termination	Comment
B1	GND	Power Ground	PWR GND	-	-
B2	GBE0_ACT#	Ethernet Activity LED	OD	-	-
B3	LPC_FRAME#	LPC Frame Indicator	0-3.3	PU 20k in CPU (S0)	-
B4	LPC_ADO	LPC Multiplexed Command, Address & Data 0	I/O-3.3	PU 20k in CPU (S0)	-
B5	LPC_AD1	LPC Multiplexed Command, Address & Data 1	I/O-3.3	PU 20k in CPU (S0)	-
B6	LPC_AD2	LPC Multiplexed Command, Address & Data 2	I/O-3.3	PU 20k in CPU (S0)	-
B7	LPC_AD3	LPC Multiplexed Command, Address & Data 3	I/O-3.3	PU 20k in CPU (S0)	-
B8	LPC_DRQ0#	LPC Serial DMA/Master Request 0	I-3.3	-	Reserved (not implemented in Bay Trail-I)
B9	LPC_DRQ1#	LPC Serial DMA/Master Request 1	I-3.3	-	Reserved (not implemented in Bay Trail-I)
B10	LPC_CLK	33MHz LPC clock	0-3.3	PD 20k in CPU	-
B11	GND	Power Ground	PWR GND	-	-
B12	PWRBTN#	Power Button	I-3.3	PU 10k 3.3V (S5eco)	-
B13	SMB_CLK	SMBUS Clock	0-3.3	PU 2k1 3.3V (S5)	-
B14	SMB_DAT	SMBUS Data	I/O-3.3	PU 2k1 3.3V (S5)	-
B15	SMB_ALERT#	SMBUS Alert	I/O-3.3	PU 2k1 3.3V (S5)	-
B16	SATA1_TX+	SATA 1 Transmit Pair +	DP-0	-	-
B17	SATA1_TX-	SATA 1 Transmit Pair -	DP-0	-	-
B18	SUS_STAT#	Suspend Status	0-3.3	PU 10k 3.3V (S5)	-
B19	SATA1_RX+	SATA 1 Receive Pair +	DP-I	-	-
B20	SATA1_RX-	SATA 1 Receive Pair -	DP-I	-	-
B21	GND	Power Ground	PWR GND	-	-
B22	SATA3_TX+	Not Connected	nc	-	-
B23	SATA3_TX-	Not Connected	nc	-	-
B24	PWR_OK	Power OK	I-5T	PU 10k 3.3V (S5)	-
B25	SATA3_RX+	Not Connected	nc	-	-
B26	SATA3_RX-	Not Connected	nc	-	-
B27	WDT	Watch Dog Time-Out event	0-3.3	PD 1k	-
B28	HDA_SDIN2	Not Connected	nc	-	not supported
B29	HDA_SDIN1	Audio Codec Serial Data in 1	I-3.3	PU in level translator(U55)	Level translator provides 4k PU when signal is driving high and 40k pull up when signal is driving low
B30	HDA_SDINO	Audio Codec Serial Data in 0	I-3.3	PU in level translator(U55)	Level translator provides 4k PU when signal is driving high and 40k pull up when signal is driving low
B31	GND	Power Ground	PWR GND	-	-
B32	SPKR	Speaker	0-3.3	PU in level translator(U55)	Level translator provides 4k PU when signal is driving high and 40k pull up when signal is driving low
B33	I2C_CLK	I2C Clock	0-3.3	PU 2k21 3.3V (S5)	-
B34	I2C_DAT	I2C Data	I/O-3.3	PU 2k21 3.3V (S5)	-
B35	THRM#	Over Temperature Input	I-3.3	PU 10k 3.3V (S0)	-
B36	USB7-	USB 2.0 Data Pair Port 7 -	DP-I/O	-	-
B37	USB7+	USB 2.0 Data Pair Port 7 +	DP-I/O	-	-
B38	USB_4_5_OC#	USB Overcurrent Indicator Port 4/5	I-3.3	PU 10k 3.3V (S5)	-
B39	USB5-	USB 2.0 Data Pair Port 5 -	DP-I/O	-	-
B40	USB5+	USB 2.0 Data Pair Port 5 +	DP-I/O	-	-
B41	GND	Power Ground	PWR GND	-	-
B42	USB3-	USB 2.0 Data Pair Port 3 -	DP-I/O	-	-
B43	USB3+	USB 2.0 Data Pair Port 3 +	DP-I/O	-	-
B44	USB_0_1_OC#	USB Overcurrent Indicator Port 0/1	I-3.3	PU 10k 3.3V (S5)	-
B45	USB1-	USB 2.0 Data Pair Port 1 -	DP-I/O	-	-
B46	USB1+	USB 2.0 Data Pair Port 1 +	DP-I/O	-	-
B47	EXCD1_PERST#	Express Card Reset Port 1	0-3.3	-	-
B48	EXCD1_CPPE#	Express Card Capable Card Request Port 1	I-3.3	PU 10k 3.3V (S0)	-
B49	SYS_RESET#	Reset Button Input	I-3.3	PU 10k 3.3V (S5)	100nF capacitor to GND
B50	CB_RESET#	Carrier Board Reset	0-3.3	-	-
B51	GND	Power Ground	PWR GND	-	-
B52	PCIE_RX5+	Not Connected	nc	-	-
B53	PCIE_RX5-	Not Connected	nc	-	-
B54	GPO1	General Purpose Output 1	0-3.3	-	-
B55	PCIE_RX4+	Not Connected	nc	-	-
B56	PCIE_RX4-	Not Connected	nc	-	-
B57	GPO2	General Purpose Output 2	0-3.3	-	-
B58	PCIE_RX3+	PCI Express Lane 3 Receive +	DP-I	-	only available on USB-LAN var.
B59	PCIE_RX3-	PCI Express Lane 3 Receive -	DP-I	-	only available on USB-LAN var.
B60	GND	Power Ground	PWR GND	-	-

B61	PCIE_RX2+	PCI Express Lane 2 Receive +	DP-I	-	-
B62	PCIE_RX2-	PCI Express Lane 2 Receive -	DP-I	-	-
B63	GPO3	General Purpose Output 3	O-3.3	-	-
B64	PCIE_RX1+	PCI Express Lane 1 Receive +	DP-I	-	-
B65	PCIE_RX1-	PCI Express Lane 1 Receive -	DP-I	-	-
B66	WAKE0#	PCI Express Wake Event	I-3.3	PU 10k 3.3V (S5)	-
B67	WAKE1#	General Purpose Wake Event	I-3.3	PU 10k 3.3V (S5)	-
B68	PCIE_RX0+	PCI Express Lane 0 Receive +	DP-I	-	-
B69	PCIE_RX0-	PCI Express Lane 0 Receive -	DP-I	-	-
B70	GND	Power Ground	PWR GND	-	-
B71	LVDS_B0+	LVDS Channel B DAT0+	DP-0	-	-
B72	LVDS_B0-	LVDS Channel B DAT0-	DP-0	-	-
B73	LVDS_B1+	LVDS Channel B DAT1+	DP-0	-	-
B74	LVDS_B1-	LVDS Channel B DAT1-	DP-0	-	-
B75	LVDS_B2+	LVDS Channel B DAT2+	DP-0	-	-
B76	LVDS_B2-	LVDS Channel B DAT2-	DP-0	-	-
B77	LVDS_B3+	LVDS Channel B DAT3+	DP-0	-	-
B78	LVDS_B3-	LVDS Channel B DAT3-	DP-0	-	-
B79	LVDS_BKLT_EN	Panel Backlight On	O-3.3	PD 100k	-
B80	GND	Power Ground	PWR GND	-	-
B81	LVDS_B_CK+	LVDS Channel B Clock+	DP-0	-	-
B82	LVDS_B_CK-	LVDS Channel B Clock-	DP-0	-	-
B83	LVDS_BKLT_CTRL	Backlight Brightness Control	O-3.3	-	-
B84	VCC_5V_SBY	5V Standby	PWR 5V (S5)	-	-
B85	VCC_5V_SBY	5V Standby	PWR 5V (S5)	-	-
B86	VCC_5V_SBY	5V Standby	PWR 5V (S5)	-	-
B87	VCC_5V_SBY	5V Standby	PWR 5V (S5)	-	-
B88	BIOS_DIS1#	BIOS Selection Strap 1	I-3.3	PU 10k 3.3V (S5)	-
B89	CRT_RED	CRT_RED / Analog Video RGB-RED	OA	PD 150R	-
B90	GND	Power Ground	PWR GND	-	-
B91	CRT_GREEN	CRT_GREEN / Analog Video RGB-GREEN	OA	PD 150R	-
B92	CRT_BLUE	CRT_BLUE / Analog Video RGB-BLUE	OA	PD 150R	-
B93	CRT_HSYNC	CRT_HSYNC / Analog Video H-Sync	O-3.3	-	-
B94	CRT_VSYNC	CRT_VSYNC / Analog Video V-Sync	O-3.3	-	-
B95	CRT_DDC_CLK	CRT_DDC_CLK / Display Data Channel Clock	I/O-5	PU 2k2 3.3V_S0	-
B96	CRT_DDC_DATA	CRT_DDC_DATA / Display Data Channel Data	I/O-5	PU 2k2 3.3V_S0	-
B97	SPI_CS#	SPI Chip Select	O-3.3	PU in level transalator(U55)	Level transalator provides 4k PU when signal is driving high and 40k pull up when signal is driving low
B98	RSVD	Reserved for future use	nc	-	-
B99	RSVD	Reserved for future use	nc	-	-
B100	GND	Power Ground	PWR GND	-	-
B101	FAN_PWMOUT	Fan PWM Output	O-3.3	-	20V protection circuit implemented on module
B102	FAN_TACHIN	Fan Tach Input	I-3.3	PU 10k 3.3V (S0)	20V protection circuit implemented on module
B103	SLEEP#	Sleep Button Input	I-3.3	PU 10k 3.3V (S5)	20V protection circuit implemented on module
B104	VCC_12V	Main Input Voltage (4.75-20V)	PWR 4.75-20V	-	-
B105	VCC_12V	Main Input Voltage (4.75-20V)	PWR 4.75-20V	-	-
B106	VCC_12V	Main Input Voltage (4.75-20V)	PWR 4.75-20V	-	-
B107	VCC_12V	Main Input Voltage (4.75-20V)	PWR 4.75-20V	-	-
B108	VCC_12V	Main Input Voltage (4.75-20V)	PWR 4.75-20V	-	-
B109	VCC_12V	Main Input Voltage (4.75-20V)	PWR 4.75-20V	-	-
B110	GND	Power Ground	PWR GND	-	-

7.4 Connector X1B Row C

Pin	Signal	Description	Type	Termination	Comment
C1	GND	Power Ground	PWR GND	-	-
C2	GND	Power Ground	PWR GND	-	-
C3	USB_SSRX0-	USB Super Speed Receive - (0)	DP-I	-	-
C4	USB_SSRX0+	USB Super Speed Receive + (0)	DP-I	-	-
C5	GND	Power Ground	PWR GND	-	-
C6	USB_SSRX1-	Not Connected	nc	-	-
C7	USB_SSRX1+	Not Connected	nc	-	-
C8	GND	Power Ground	PWR GND	-	-
C9	USB_SSRX2-	Not Connected	nc	-	-
C10	USB_SSRX2+	Not Connected	nc	-	-
C11	GND	Power Ground	PWR GND	-	-
C12	USB_SSRX3-	Not Connected	nc	-	-
C13	USB_SSRX3+	Not Connected	nc	-	-
C14	GND	Power Ground	PWR GND	-	-
C15	DDI1_PAIR6+	Not Connected	nc	-	-
C16	DDI1_PAIR6-	Not Connected	nc	-	-
C17	RSVD	Reserved for future use	nc	-	-
C18	RSVD	Reserved for future use	nc	-	-
C19	PCIE_RX6+	Not Connected	nc	-	-
C20	PCIE_RX6-	Not Connected	nc	-	-
C21	GND	Power Ground	PWR GND	-	-
C22	PCIE_RX7+	Not Connected	nc	-	-
C23	PCIE_RX7-	Not Connected	nc	-	-
C24	DDI1_HPD	DDI1 Hotplug Detect	I-3.3	PD 100k	-
C25	DDI1_PAIR4+	Not Connected	nc	-	-
C26	DDI1_PAIR4-	Not Connected	nc	-	-
C27	RSVD	Reserved for future use	nc	-	-
C28	RSVD	Reserved for future use	nc	-	-
C29	DDI1_PAIR5+	Not Connected	nc	-	-
C30	DDI1_PAIR5-	Not Connected	nc	-	-
C31	GND	Power Ground	PWR GND	-	-
C32	DDI2_CTRLCLK_AUX+	DDI2 CTRLCLK/AUX+	I/O-3.3	PD 100k	-
C33	DDI2_CTRLDATA_AUX-	DDI2 CTRLDATA/AUX-	I/O-3.3	PU 100k 3.3V (S0)	-
C34	DDI2_DDC_AUX_SEL	DDI2 DDC/AUX select	I-3.3	PD 1M	-
C35	RSVD	Reserved for future use	nc	-	-
C36	DDI3_CTRLCLK_AUX+	Not Connected	nc	-	-
C37	DDI3_CTRLDATA_AUX-	Not Connected	nc	-	-
C38	DDI3_DDC_AUX_SEL	Not Connected	nc	-	-
C39	DDI3_PAIR0+	Not Connected	nc	-	-
C40	DDI3_PAIR0-	Not Connected	nc	-	-
C41	GND	Power Ground	PWR GND	-	-
C42	DDI3_PAIR1+	Not Connected	nc	-	-
C43	DDI3_PAIR1-	Not Connected	nc	-	-
C44	DDI3_HPD	Not Connected	nc	-	-
C45	RSVD	Reserved for future use	nc	-	-
C46	DDI3_PAIR2+	Not Connected	nc	-	-
C47	DDI3_PAIR2-	Not Connected	nc	-	-
C48	RSVD	Reserved for future use	nc	-	-
C49	DDI3_PAIR3+	Not Connected	nc	-	-
C50	DDI3_PAIR3-	Not Connected	nc	-	-
C51	GND	Power Ground	PWR GND	-	-
C52	PEG_RX0+	MCSI1_D0_P	DP-I	-	-
C53	PEG_RX0-	MCSI1_D0_N	DP-I	-	-
C54	TYPE0#	n.c. for type 6 module	nc	-	-
C55	PEG_RX1+	MCSI1_D1_P	DP-I	-	-
C56	PEG_RX1-	MCSI1_D1_N	DP-I	-	-
C57	TYPE1#	n.c. for type 6 module	nc	-	-
C58	PEG_RX2+	MCSI1_D2_P	DP-I	-	-
C59	PEG_RX2-	MCSI1_D2_N	DP-I	-	-
C60	GND	Power Ground	PWR GND	-	-
C61	PEG_RX3+	MCSI1_D3_P	DP-I	-	-
C62	PEG_RX3-	MCSI1_D3_N	DP-I	-	-
C63	RSVD	Reserved for future use	nc	-	-
C64	RSVD	Reserved for future use	nc	-	-

C65	PEG_RX4+	MCSI2_DO_P	DP-I	-	-
C66	PEG_RX4-	MCSI2_DO_N	DP-I	-	-
C67	RSVD	RAPID_SHUTDOWN	I-5	PD 100k	100nF capacitor to GND
C68	PEG_RX5+	Not Connected	nc	-	-
C69	PEG_RX5-	Not Connected	nc	-	-
C70	GND	Power Ground	PWR GND	-	-
C71	PEG_RX6+	Not Connected	nc	-	-
C72	PEG_RX6-	Not Connected	nc	-	-
C73	GND	Power Ground	PWR GND	-	-
C74	PEG_RX7+	Not Connected	nc	-	-
C75	PEG_RX7-	Not Connected	nc	-	-
C76	GND	Power Ground	PWR GND	-	-
C77	RSVD	Reserved for future use	nc	-	-
C78	PEG_RX8+	Not Connected	nc	-	-
C79	PEG_RX8-	Not Connected	nc	-	-
C80	GND	Power Ground	PWR GND	-	-
C81	PEG_RX9+	Not Connected	nc	-	-
C82	PEG_RX9-	Not Connected	nc	-	-
C83	RSVD	Reserved for future use	nc	-	-
C84	GND	Power Ground	PWR GND	-	-
C85	PEG_RX10+	Not Connected	nc	-	-
C86	PEG_RX10-	Not Connected	nc	-	-
C87	GND	Power Ground	PWR GND	-	-
C88	PEG_RX11+	Not Connected	nc	-	-
C89	PEG_RX11-	Not Connected	nc	-	-
C90	GND	Power Ground	PWR GND	-	-
C91	PEG_RX12+	MCSI_GPIO1	NC	-	-
C92	PEG_RX12-	MCSI_GPIO3	I/O 3.3	-	-
C93	GND	Power Ground	PWR GND	-	-
C94	PEG_RX13+	MCSI_GPIO5	I/O 3.3	-	-
C95	PEG_RX13-	MCSI_GPIO7	I/O 3.3	-	-
C96	GND	Power Ground	PWR GND	-	-
C97	RSVD	Reserved for future use	nc	-	-
C98	PEG_RX14+	MCSI_GPIO9	I/O 3.3	-	-
C99	PEG_RX14-	MCSI_GPIO11	I/O 3.3	-	-
C100	GND	Power Ground	PWR GND	-	-
C101	PEG_RX15+	Not Connected	nc	-	-
C102	PEG_RX15-	Not Connected	nc	-	-
C103	GND	Power Ground	PWR GND	-	-
C104	VCC_12V	Main Input Voltage (4.75-20V)	PWR 4.75-20V	-	-
C105	VCC_12V	Main Input Voltage (4.75-20V)	PWR 4.75-20V	-	-
C106	VCC_12V	Main Input Voltage (4.75-20V)	PWR 4.75-20V	-	-
C107	VCC_12V	Main Input Voltage (4.75-20V)	PWR 4.75-20V	-	-
C108	VCC_12V	Main Input Voltage (4.75-20V)	PWR 4.75-20V	-	-
C109	VCC_12V	Main Input Voltage (4.75-20V)	PWR 4.75-20V	-	-
C110	GND	Power Ground	PWR GND	-	-

7.5 Connector X1B Row D

Pin	Signal	Description	Type	Termination	Comment
D1	GND	Power Ground	PWR GND	-	-
D2	GND	Power Ground	PWR GND	-	-
D3	USB_SSTX0-	USB Super Speed Transmit - (0)	DP-0	-	-
D4	USB_SSTX0+	USB Super Speed Transmit + (0)	DP-0	-	-
D5	GND	Power Ground	PWR GND	-	-
D6	USB_SSTX1-	Not Connected	nc	-	-
D7	USB_SSTX1+	Not Connected	nc	-	-
D8	GND	Power Ground	PWR GND	-	-
D9	USB_SSTX2-	Not Connected	nc	-	-
D10	USB_SSTX2+	Not Connected	nc	-	-
D11	GND	Power Ground	PWR GND	-	-
D12	USB_SSTX3-	Not Connected	nc	-	-
D13	USB_SSTX3+	Not Connected	nc	-	-
D14	GND	Power Ground	PWR GND	-	-
D15	DDI1_CTRLCLK_AUX+	DDI1 CTRLCLK/AUX+	I/O-3.3	PD 100k	-
D16	DDI1_CTRLCLK_AUX-	DDI1 CTRLCLK/AUX-	I/O-3.3	PU 100k 3.3V (S0)	-
D17	RSVD	Reserved for future use	nc	-	-
D18	RSVD	Reserved for future use	nc	-	-
D19	PCIE_TX6+	Not Connected	nc	-	-
D20	PCIE_TX6-	Not Connected	nc	-	-
D21	GND	Power Ground	PWR GND	-	-
D22	PCIE_TX7+	Not Connected	nc	-	-
D23	PCIE_TX7-	Not Connected	nc	-	-
D24	RSVD	Reserved for future use	nc	-	-
D25	RSVD	Reserved for future use	nc	-	-
D26	DDI1_PAIR0+	DDI1 Pair 0 +	DP-0	-	-
D27	DDI1_PAIR0-	DDI1 Pair 0 -	DP-0	-	-
D28	RSVD	Reserved for future use	nc	-	-
D29	DDI1_PAIR1+	DDI1 Pair 1 +	DP-0	-	-
D30	DDI1_PAIR1-	DDI1 Pair 1 -	DP-0	-	-
D31	GND	Power Ground	PWR GND	-	-
D32	DDI1_PAIR2+	DDI1 Pair 2 +	DP-0	-	-
D33	DDI1_PAIR2-	DDI1 Pair 2 -	DP-0	-	-
D34	DDI1_DDC_AUX_SEL	DDI1 DDC/AUX select	I-3,3	PD 1M	-
D35	RSVD	Reserved for future use	nc	-	-
D36	DDI1_PAIR3+	DDI1 Pair 3 +	DP-0	-	-
D37	DDI1_PAIR3-	DDI1 Pair 3 -	DP-0	-	-
D38	RSVD	Reserved for future use	nc	-	-
D39	DDI2_PAIR0+	DDI2 Pair 0 +	DP-0	-	-
D40	DDI2_PAIR0-	DDI2 Pair 0 -	DP-0	-	-
D41	GND	Power Ground	PWR GND	-	-
D42	DDI2_PAIR1+	DDI2 Pair 1 +	DP-0	-	-
D43	DDI2_PAIR1-	DDI2 Pair 1 -	DP-0	-	-
D44	DDI2_HPD	DDI2 Hotplug Detect	I-3,3	-	-
D45	RSVD	Reserved for future use	nc	-	-
D46	DDI2_PAIR2+	DDI2 Pair 2 +	DP-0	-	-
D47	DDI2_PAIR2-	DDI2 Pair 2 -	DP-0	-	-
D48	RSVD	Reserved for future use	nc	-	-
D49	DDI2_PAIR3+	DDI2 Pair 3 +	DP-0	-	-
D50	DDI2_PAIR3-	DDI2 Pair 3 -	DP-0	-	-
D51	GND	Power Ground	PWR GND	-	-
D52	PEG_TX0+	MCSI1_CLK_P	CLK	-	-
D53	PEG_TX0-	MCSI1_CLK_N	CLK	-	-
D54	PEG_LANE_RV#	Not Connected	nc	-	-
D55	PEG_TX1+	Not Connected	nc	-	-
D56	PEG_TX1-	Not Connected	nc	-	-
D57	TYPE2#	GND for type 6 module	PWR	-	-
D58	PEG_TX2+	Not Connected	nc	-	-
D59	PEG_TX2-	Not Connected	nc	-	-
D60	GND	Power Ground	PWR GND	-	-
D61	PEG_TX3+	Not Connected	nc	-	-

D62	PEG_TX3-	Not Connected	nc	-	-
D63	RSVD	Reserved for future use	nc	-	-
D64	RSVD	Reserved for future use	nc	-	-
D65	PEG_TX4+	MCSI2_CLK_P	CLK	-	-
D66	PEG_TX4-	MCSI2_CLK_N	CLK	-	-
D67	GND	Power Ground	PWR GND	-	-
D68	PEG_TX5+	Not Connected	nc	-	-
D69	PEG_TX5-	Not Connected	nc	-	-
D70	GND	Power Ground	PWR GND	-	-
D71	PEG_TX6+	Not Connected	nc	-	-
D72	PEG_TX6-	Not Connected	nc	-	-
D73	GND	Power Ground	PWR GND	-	-
D74	PEG_TX7+	Not Connected	nc	-	-
D75	PEG_TX7-	Not Connected	nc	-	-
D76	GND	Power Ground	PWR GND	-	-
D77	RSVD	Reserved for future use	nc	-	-
D78	PEG_TX8+	MCSI3_CLK_P	CLK	-	-
D79	PEG_TX8-	MCSI3_CLK_N	CLK	-	-
D80	GND	Power Ground	PWR GND	-	-
D81	PEG_TX9+	Not Connected	nc	-	-
D82	PEG_TX9-	Not Connected	nc	-	-
D83	RSVD	Reserved for future use	nc	-	-
D84	GND	Power Ground	PWR GND	-	-
D85	PEG_TX10+	Not Connected	nc	-	-
D86	PEG_TX10-	Not Connected	nc	-	-
D87	GND	Power Ground	PWR GND	-	-
D88	PEG_TX11+	Not Connected	nc	-	-
D89	PEG_TX11-	Not Connected	nc	-	-
D90	GND	Power Ground	PWR GND	-	-
D91	PEG_TX12+	MCSI_GPIO0	I/O 3.3	-	-
D92	PEG_TX12-	MCSI_GPIO2	I/O 3.3	-	-
D93	GND	Power Ground	PWR GND	-	-
D94	PEG_TX13+	MCSI_GPIO4	I/O 3.3	-	-
D95	PEG_TX13-	MCSI_GPIO6	I/O 3.3	-	-
D96	GND	Power Ground	PWR GND	-	-
D97	RSVD	Reserved for future use	nc	-	-
D98	PEG_TX14+	MCSI_GPIO8	I/O 3.3	-	-
D99	PEG_TX14-	MCSI_GPIO10	I/O 3.3	-	-
D100	GND	Power Ground	PWR GND	-	-
D101	PEG_TX15+	Not Connected	nc	-	-
D102	PEG_TX15-	Not Connected	nc	-	-
D103	GND	Power Ground	PWR GND	-	-
D104	VCC_12V	Main Input Voltage (4.75-20V)	PWR 4.75-20V	-	-
D105	VCC_12V	Main Input Voltage (4.75-20V)	PWR 4.75-20V	-	-
D106	VCC_12V	Main Input Voltage (4.75-20V)	PWR 4.75-20V	-	-
D107	VCC_12V	Main Input Voltage (4.75-20V)	PWR 4.75-20V	-	-
D108	VCC_12V	Main Input Voltage (4.75-20V)	PWR 4.75-20V	-	-
D109	VCC_12V	Main Input Voltage (4.75-20V)	PWR 4.75-20V	-	-
D110	GND	Power Ground	PWR GND	-	-

8 Connector J1 micro-SD Card

Pin	Signal	Description	Type	Termination	Comment
1	DAT2	-	-	PU 20k in CPU (S0)	-
2	CD/DAT3	-	-	PU 20k in CPU (S0)	-
3	CMD	-	-	PU 20k in CPU (S0)	-
4	VDD	-	-	-	-
5	CLK	-	-	PD 20k in CPU	-
6	VSS	GND	PWR GND	-	-
7	DAT0	-	-	PU 20k in CPU (S0)	-
8	DAT1	-	-	PU 20k in CPU (S0)	-
9	C_DETECT	-	-	PU 4.7k 3.3V (S0)	-
10	CD_GND	GND	GND	-	-
11	SH_11	GND	GND	-	-
12	SH_12	GND	GND	-	-
13	SH_13	GND	GND	-	-
14	SH_14	GND	GND	-	-

9 Connector J2 Fan Control

Pin	Signal	Description	Type	Termination	Comment
1	CPU_FAN_TACH_C	TACH	-	PU 10k 3.3V (S0)	-
2	CPU_FAN_VCC	CPU FAN VCC	-	-	-
3	CPU_FAN_GND	CPU FAN GND	-	-	-

10 Connector J3 XDP SFF connector, not available on production revision

Pin	Signal	Description	Type	Termination	Comment
1	PREQ#	XDP_PREQ#	-	PU 200 ohm (S5)	-
2	PRDY#	XDP_PRDY#	-	PU 2K in CPU (S5)	-
3	GND	GDN	GND	-	-
4	BPM3#	XDP_OBSDATA_A0	-	PD 20k in CPU	-
5	BPM2#	XDP_OBSDATA_A1	-	PD 20k in CPU	-
6	GND	GND	GND	-	-
7	BPM1#	XDP_OBSDATA_A2	-	PD 20k in CPU	-
8	BPM0#	XDP_OBSDATA_A3	-	PD 20k in CPU	-
9	GND	GND	GND	-	-
10	HOOK0	XDP_HOOK0	-	-	-
11	HOOK1	XDP_PWRBTN#	-	PU 10k 3.3V (S5eco)	-
12	HOOK2	XDP_COREPWROK	-	-	-
13	HOOK3	XDP_RTEST#	-	-	100nF capacitor to GND
14	BCLK1	NOT CONNECTED	NC	-	-
15	BCLK0	NOT CONNECTED	NC	-	-
16	PROC_VTT	V_1V8_S5	-	-	-
17	RESET#	XDP_PLTRST#	-	-	-
18	DRB#	XDP_RESET#	-	PU 10k 3.3V (S5)	100nF capacitor to GND
19	GND	GND	GND	-	-
20	TDO	XDP_TDO_RES	-	PU 51.1 ohm (S5)	-
21	TRST#	XDP_TRST#	-	PD 51.1 ohm	-
22	TDI	XDP_TDI	-	PU 51.1 ohm (S5)	-
23	TMS	XDP_TMS	-	PU 51.1 ohm (S5)	-
24	TCK1	NOT CONNECTED	NC	-	-
25	GND	GND	GND	-	-
26	TCK0	XDP_CLK_FIL	-	PD 51.1 ohm	-
27	SHLD1	NOT CONNECTED	NC	-	-
28	SHLD2	NOT CONNECTED	NC	-	-

11 Connector J4 JTAG CPLD

Pin	Signal	Description	Type	Termination	Comment
1	v_3V3_S5	V 3.3 s5	-	-	-
2	JTAG TDI	-	-	PU 1k 3.3V (S5)	-
3	JTAG_TCK	-	-	PU 1k 3.3V (S5)	-
4	JTAG_TMS	-	-	PD 1k	-
5	JTAG TDO	-	-	PU 1k 3.3V (S5)	-
6	GND	GND	GND	-	-
7	DBG_DATA_OUT	-	-	-	-
8	GND	GND	GND	-	-



The termination resistors in these tables are already mounted on the module. Refer to the design guide for information about additional termination resistors.

12 BIOS Operation

The BIOS (Basic Input and Output System) or UEFI (Unified Extensible Firmware Interface) records hardware parameters of the system in the CMOS on the Computer-on-Module. It's major functions include execution of the POST(Power-On-Self-Test) during system start-up, saving system parameters and loading the operating system. The BIOS includes a BIOS Setup program that allows to modify system configuration settings. The module is equipped with Phoenix SecureCore, which is located in an onboard SPI serial flash memory.

12.1 Determining the BIOS Version

To determine the BIOS version currently used on the Computer-on-Modules please check System Information Page inside Setup

12.2 BIOS Update

Kontron provides continuous BIOS updates for Computer-on-Modules. The updates are provided for download on <http://emdcustomersection.kontron.com> with detailed change descriptions within the according Product Change Notification (PCN). Please register for EMD Customer Section to get access to BIOS downloads and PCN service.

Modules with BIOS Region/Setup only inside the flash can be updated with AFU utilities (usually 1-3MB BIOS binary file size) directly. Modules with Intel® Management Engine, Ethernet, Flash Descriptor and other options additionally to the BIOS Region (usually 4-16MB BIOS binary file size) requires a different update process with Intel Flash Utility FPT and a wrapper to backup and restore configurations and the MAC address. Therefore it is strongly recommended to use the batch file inside the BIOS download package available on EMD Customer Section.

- » Boot the module to DOS/EFI Shell with access to the BIOS image and Firmware Update Utility provided on EMD Customer Section
- » Execute Flash.bat in DOS or Flash.nsh in EFI Shell



Any modification of the update process may damage your module!

12.3 POST Codes

Important POST codes during boot-up

8B	Booted to DOS
68	Booted to Setup / EFI Shell
00	Booted to Windows

12.4 Setup Guide

The Setup Utility changes system behavior by modifying the Firmware configuration. The setup program uses a number of menus to make changes and turn features on or off.

Functional keystrokes in POST:

[F2]	Enter Setup
[F5]	Boot Menu
[ESC] + [2]	Enter Setup via Remote Keyboard in Console Redirection Mode (depending on console Settings F2 may not be supported)

Functional keystrokes in Setup:

[F1]	Help
[F9]	Load default settings
[F10]	Save and Exit

Menu Bar

The menu bar at the top of the window lists different menus. Use the left/right arrow keys to make a selection.

Legend Bar

Use the keys listed in the legend bar on the bottom to make your selections or exit the current menu. The table below describes the legend keys and their alternates.

Key	Function
← or → Arrow key	Select a menu.
↑ or ↓ Arrow key	Select fields in current menu.
<Home> or <End>	Move cursor to top or bottom of current window.
<PgUp> or <PgDn>	Move cursor to next or previous page.
+/- or F5/F6	Change Option
<Enter>	Execute command or select submenu.

Selecting an Item

Use the ↑ or ↓ key to move the cursor to the field you want. Then use the + and – keys to select a value for that field. The Save Value commands in the Exit menu save the values displayed in all the menus.

Displaying Submenus

Use the ← or → key to move the cursor to the submenu you want. Then press <Enter>. A pointer (▶) marks all submenus.

Item Specific Help Window


The Help window on the right side of each menu displays the Help text for the selected item. It updates as you move the cursor to each field.

General Help Window

Pressing <F1> on a menu brings up the General Help window that describes the legend keys and their alternates. Press <Esc> to exit the General Help window.


12.5 BIOS Setup

12.5.1 Main

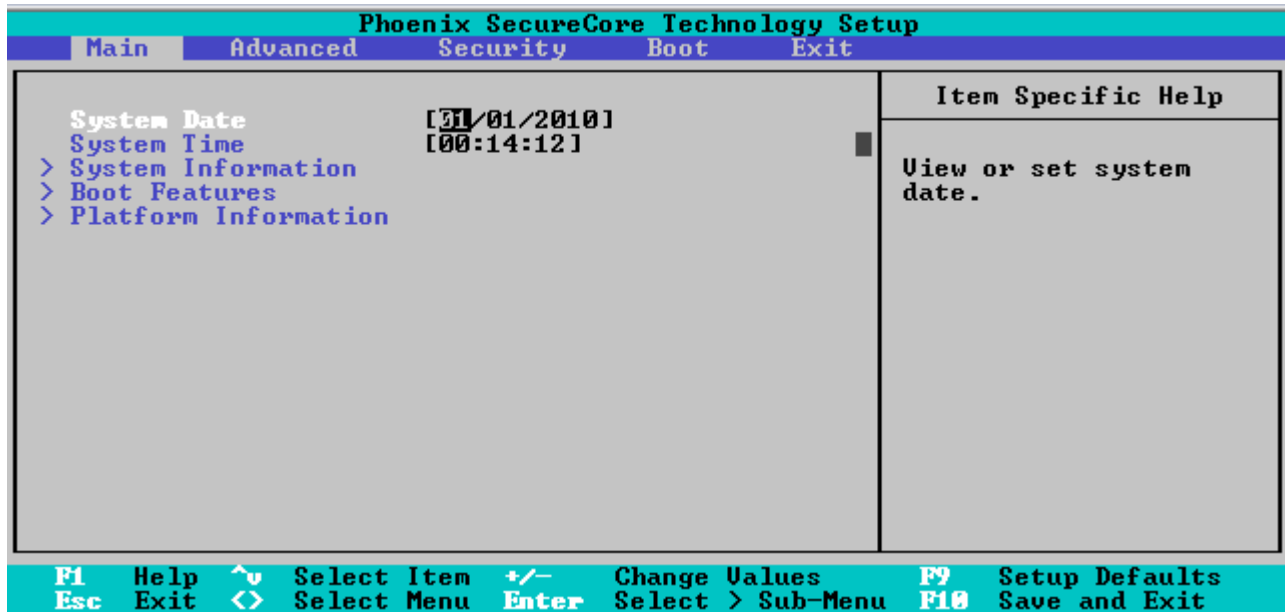

Feature	Options	Description
System Date	[mm/dd/yyyy]	Set the Date. Use 'Tab' to switch between Date elements
System Time	[hh:mm:ss]	Set the Time. Use 'Tab' to switch between Time elements

System Information

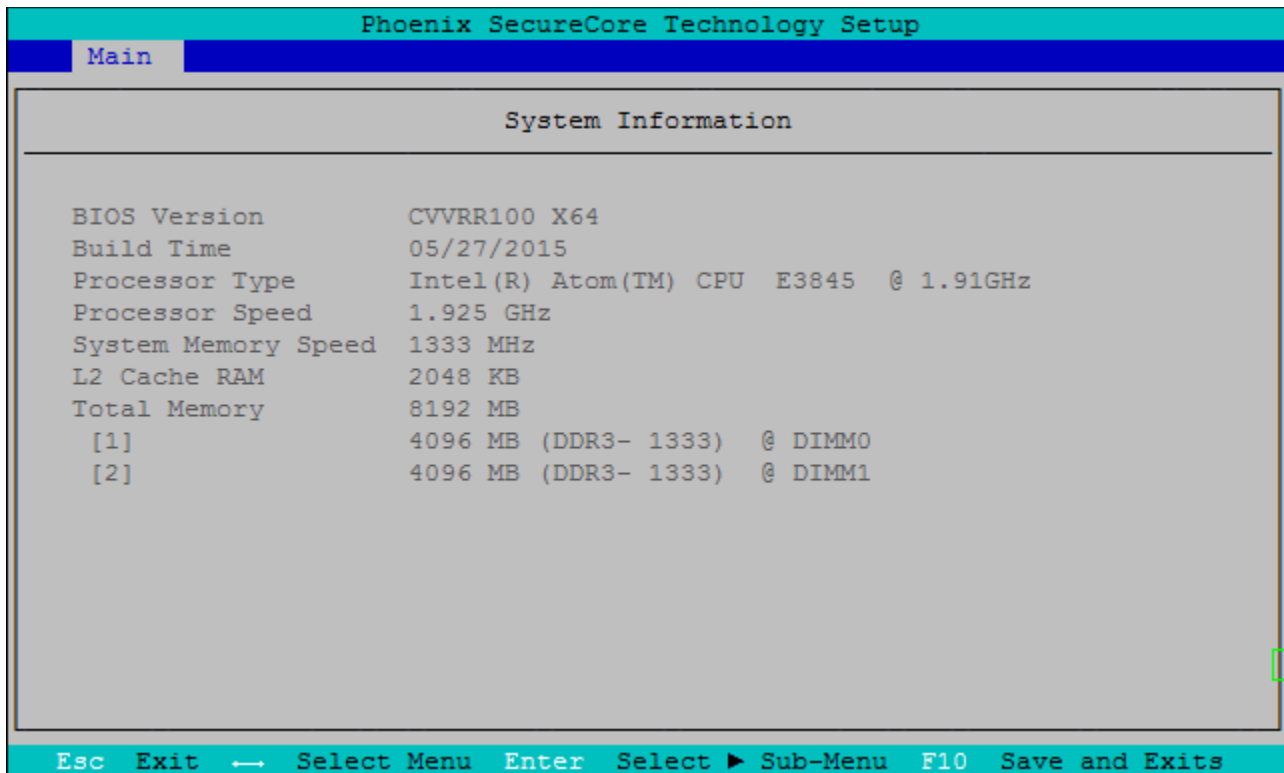

Boot Features

Phoenix SecureCore Technology Setup		
Main		
Boot Features		Item Specific Help
NumLock:	[Off]	Enable/Disable Universal Console Redirection. UCR uses the PCU UART and also requires LPSS HSUART #1 Support to be Disabled. When Console Redirection is Enabled, the PCU UART will be Enabled and HSUART #1 will also be Disabled.
Timeout	[1]	
CSM Support	[Yes]	
Quick Boot	[Disabled]	
Dark Boot	[Disabled]	
Diagnostic Splash Screen	[Disabled]	
Diagnostic Summary Screen	[Disabled]	
BIOS Level USB	[Enabled]	
Console Redirection	[Disabled]	
Allow Hotkey in S4 resume	[Enabled]	
UEFI Boot	[Enabled]	
Legacy Boot	[Enabled]	
Boot in Legacy Video Mode	[Disabled]	
Load OPROM	[On Demand]	
Boot Priority	[UEFI First]	
F1 Help	↑ Select Item	F9 Setup Defaults
Esc Exit	↔ Select Menu	F10 Save and Exit
	+/- Change Values	
	Enter Select > Sub-Menu	

Feature	Options	Description
NumLock	On Off	Selects Power-on state for NumLock
Timeout	1	Number of seconds that P.O.S.T will wait for the user input before booting
CSM Support	Yes No	Enables or Disables the UEFI CSM (Compatibility Support Module) to support legacy PC boot process. Both legacy and UEFI boots are feasible
Quick Boot	Disabled Enabled	Enable or Disable Quick Boot
Dark Boot	Disabled Enabled	Enable or Disable Dark Boot
Diagnostic Splash Screen	Disabled Enabled	Enable or Disable the Diagnostic Splash Screen
Diagnostic Summary Screen	Disabled Enabled	Display the Diagnostic Summary Screen during boot
BIOS Level USB	Enabled Disabled	Enable/Disable all BIOS support for USB in order to reduce boot time. Note that this will prevent using a USB keyboard in setup or a USB biometric scanner such as a fingerprint reader to control access to setup, but does not prevent the operating system from supporting such hardware
Console Redirection	Disabled Enabled	Enable/Disable Universal Console Redirection
- Console Port	All Onboard COM1 Onboard COM2 SIO COM1 SIO COM2	Select Port for console redirection. Note: the respective port has to be enabled in setup!
- Terminal Type	ANSI VT100 VT100+ UTF8	Set terminal type of UCR
- Baudrate	9600 19200 38400 57600 115200	Set terminal type of UCR
- Flow Control	None RTS/CTS XON/XOFF	Set flow control method for UCR. None = No flow control, RTS/CTS = Hardware flow control, XON/XOFF = Software flow control
- Continue C.R. after POST	Enabled Disabled	Enables Console Redirection after OS has loaded
Allow Hotkey in S4 resume	Enabled Disabled	Enable hotkey detection when system resuming from Hibernate state
UEFI Boot	Enabled Disabled	Enable the UEFI boot
Legacy Boot	Enabled	Enable the Legacy boot


	Disabled	
Boot in Legacy Video Mode	Disabled Enabled	Enable to force the display adapter to switch the video mode to Text Mode 3 at the end of BIOS POST for non-UEFI boot mode (Legacy Boot). Some legacy software, such as DUET, requires that the BIOS explicitly enter text video mode prior to boot
Load OPROM	On Demand All	Load all OPROMs or on demand according to the boot device
Boot Priority	UEFI First Legacy First	Select priority of boot option between UEFI and Legacy

Platform Information

Phoenix SecureCore Technology Setup	
Main	
Platform Information	Item Specific Help
Module Information	
Product Name	COMe-cBTi6R
Revision	a0
Serial #	4KW5410096
MAC Address	00:20:0C:76:E6:83
CPLD Rev	P303.0126 Release
Boot Counter	66


Esc Exit ← Select Menu Enter Select ► Sub-Menu F10 Save and Exits

12.5.2 Advanced

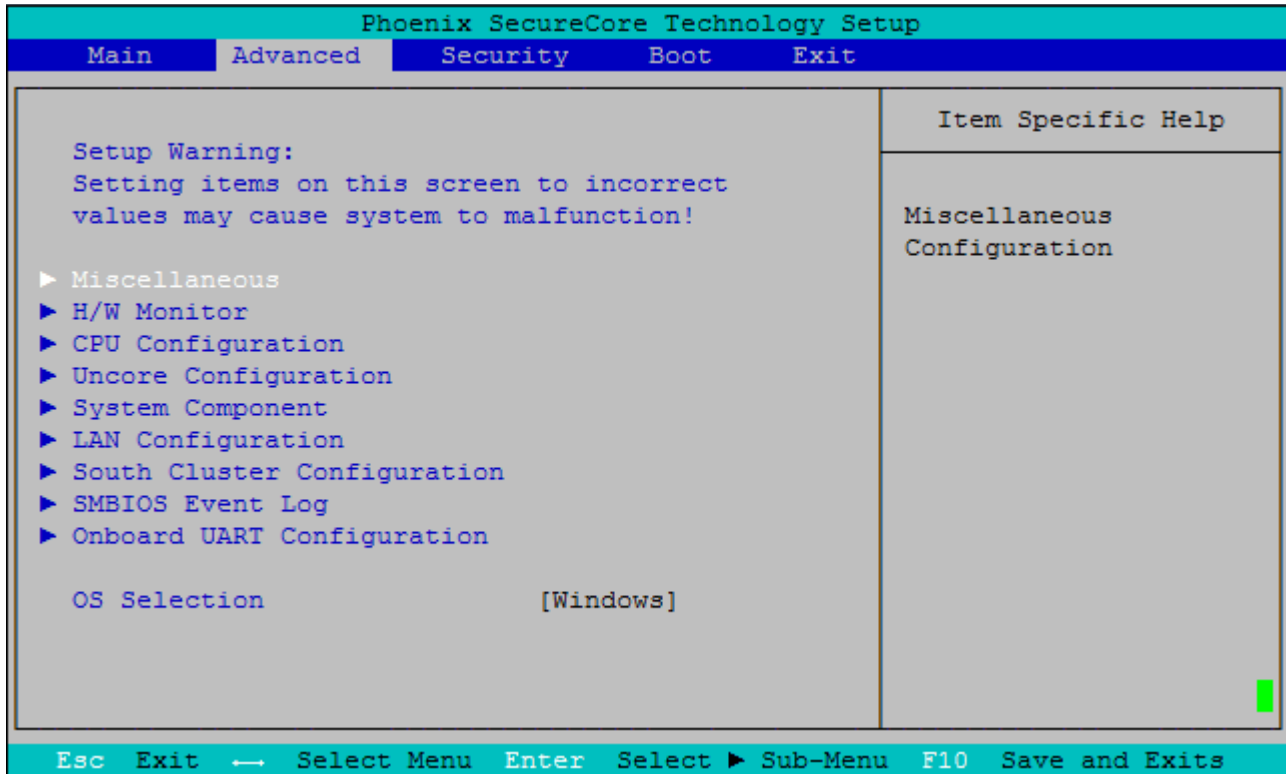


Feature	Options	Description
OS Selection	Windows Linux Android	Select the Operating System family to be booted

Miscellaneous

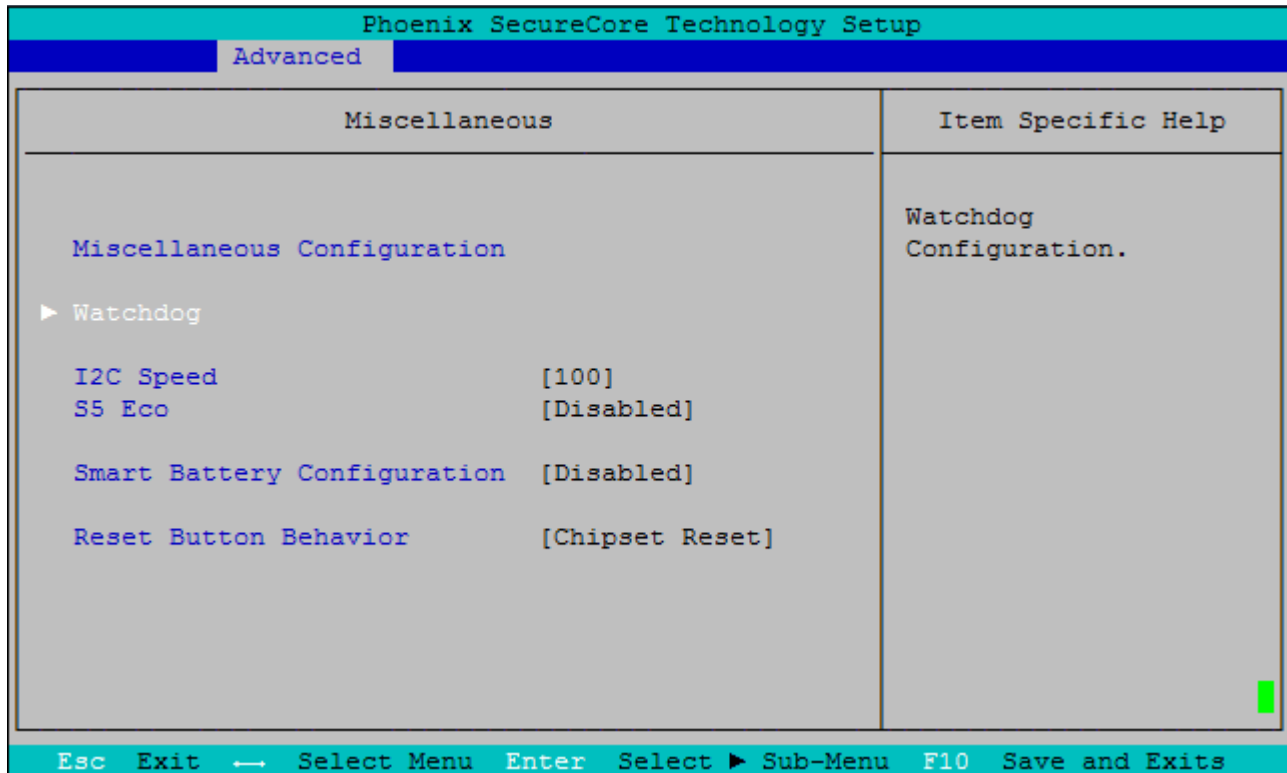

Feature	Options	Description
I2C Speed	[100]	Select I2C Bus Speed in kHz, min. 1kHz, max. 400kHz.
S5 Eco	Disabled Enabled	Enable/Disable S5 Eco subsystem to reduce power in S5 mode. Please see manual for further information
Smart Battery Configuration	Disabled Auto Charger Manager	Enable/Disable Smart Battery System Support (e.g. Kontron M.A.R.S.)
Reset Button Behavior	Chipset Reset Power Cycle	Select the system behavior on reset button event

Watchdog

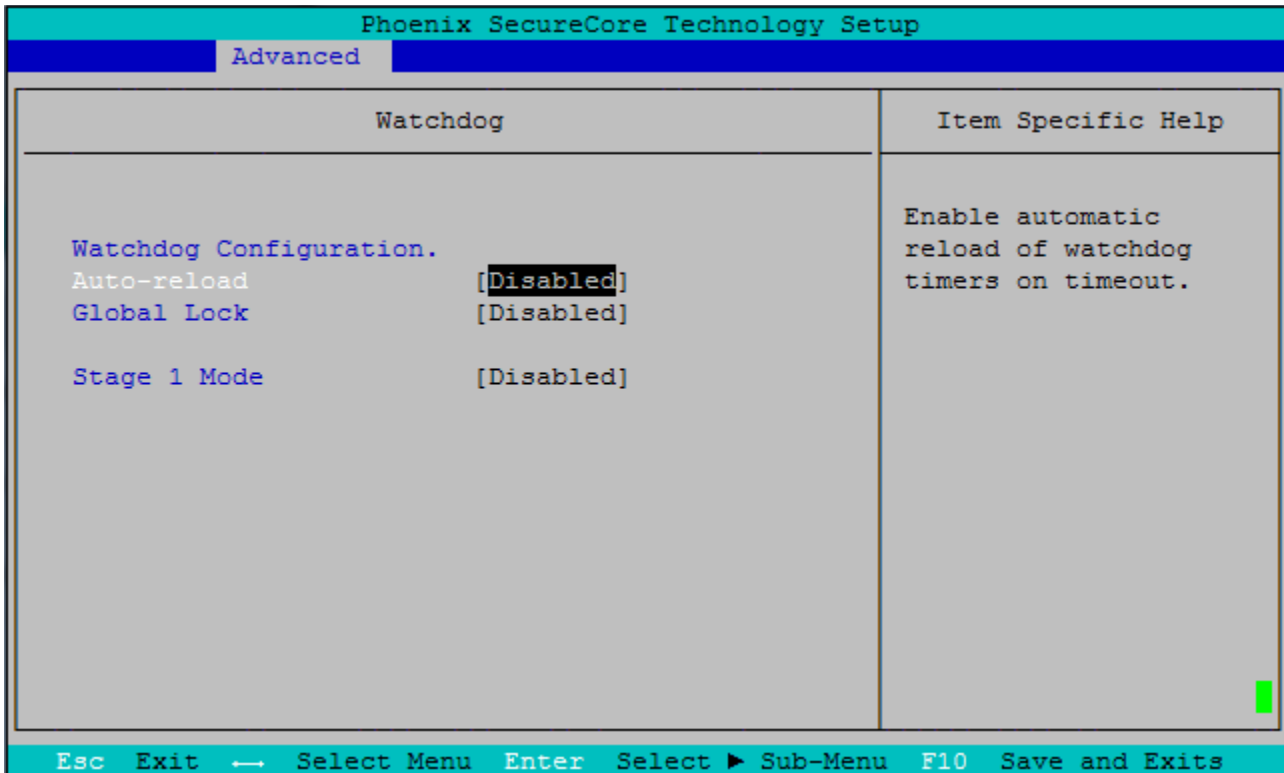

Feature	Options	Description
Auto-reload	Disabled Enabled	Enable automatic reload of watchdog timers on timeout
Global Lock	Disabled Enabled	If set to enabled, all Watchdog registers (except WD_KICK) become read only until the board is reset
Stage 1 Mode	Disabled Reset NMI SCI Delay	Select Action for first Watchdog stage
- Assert WDT Signal	Enabled Disabled	Enable/Disable assertion of WDT signal to baseboard on stage timeout
- Stage 1 Timeout	1s 5s 10s 30s 1m 3m 10m 30m	Select Timeout value for first watchdog stage

H/W Monitor

Phoenix SecureCore Technology Setup		Item Specific Help
Advanced		
H/W Monitor NCT7802Y		
Temperature Measurement PCB Temperature [+30 C] NCT7802Y Temperature [+30 C]		Number of pulses the fan produces during one revolution. Range: 1-4
Fan Measurement CPU Fan [N/A] Fan Pulse [2] Fan Control [Auto] Fan Trip Point [45] Trip Point Speed [50] Reference Temperature [PCB Temperature]		
External Fan [N/A] Fan Pulse [2] Fan Control [Auto] Fan Trip Point [45] Trip Point Speed [50] Reference Temperature [PCB Temperature]		
Voltage Measurement DDR voltage [+1.37 V] Input voltage [+5.07 V] RTC Battery [+3.60 V]		
Esc Exit <> Select Menu Enter Select > Sub-Menu F10 Save and Exits		

Feature	Value/Options	Description
PCB Temperature	xx°C	Shows the measured temperature of the printed circuit board
NCT782Y Temperature	xx°C	Shows the measured temperature of the NCT782Y Hardware monitor
CPU FAN	xxxx rpm	Shows the fan speed of onboard FAN connector
Fan Pulse	2	Number of pulses the CPU fan produces during one revolution. Range 1-4
FAN Control	Disabled Manual Auto	Set fan control mode. 'Disable' will totally stop the fan
Fan Trip Point	45	Temperature where fan accelerates. Range 20 - 80°C
Trip Point Speed	50	Fan speed at trip point in %. Minimum value is 30. Fan always runs at 100% at Tjmax - 10°C
Reference Temperature	PCB Temperature NCT782Y Temperature	Determines the temperature source which is used for automatic fan control
External FAN	xxxx rpm	Shows the fan speed of external COME FAN
Fan Pulse	2	Select the number of pulses the external fan produces during one revolution. Range 1-4
FAN Control	Disabled Manual Auto	Set fan control mode. 'Disable' will totally stop the fan
Fan Trip Point	45	Temperature where fan accelerates. Range 20 - 80°C
Trip Point Speed	50	Fan speed at trip point in %. Minimum value is 30. Fan always runs at 100% at Tjmax - 10°C
Reference Temperature	PCB Temperature NCT782Y Temperature	Determines the temperature source which is used for automatic fan control
DDR voltage	x.xx V	Shows the Module Main Input Voltage
Input voltage	x.xx V	Shows the 5V Standby Voltage input
RTC battery	x.xx V	Shows the RTC Battery Voltage input measured at COME connector

CPU Configuration

Phoenix SecureCore Technology Setup


Advanced

CPU Configuration	Item Specific Help
CPU Configuration Execute Disable Bit [Enable] Limit CPUID Maximum [Disable] Bi-directional PROCHOT# [Enable] VTX-2 [Enable] TM1 [Enable] DTS [Enable] Intel® Hyper-Threading Technology Not Supported ▶ CPU Power Management	Execute Disable Bit prevent certain classes of malicious buffer overflow attacks when combined with a supporting OS

Esc Exit ← Select Menu Enter Select ▶ Sub-Menu F10 Save and Exits

Feature	Options	Description
Execute Disable Bit	Enable Disable	Execute Disable Bit prevent certain classes of malicious buffer overflow attacks when combined with a supporting OS
Limit CPUID Maximum	Enable Disable	Disabled for Windows XP
Bi-directional PROCHOT#	Enable Disable	When a processor thermal sensor trips (either core), the PROCHOT# will be driven. If bi-direction is enabled, external agents can drive PROCHOT# to throttle the processor
VTX-2	Enable Disable	Enables or Disables the VT-x2 Mode support
TM1	Enable Disable	Enables or Disables the Thermal Management 1 support
DTS	Enable Disable	Enables or Disables the Digital Thermal Sensor

CPU Power Management

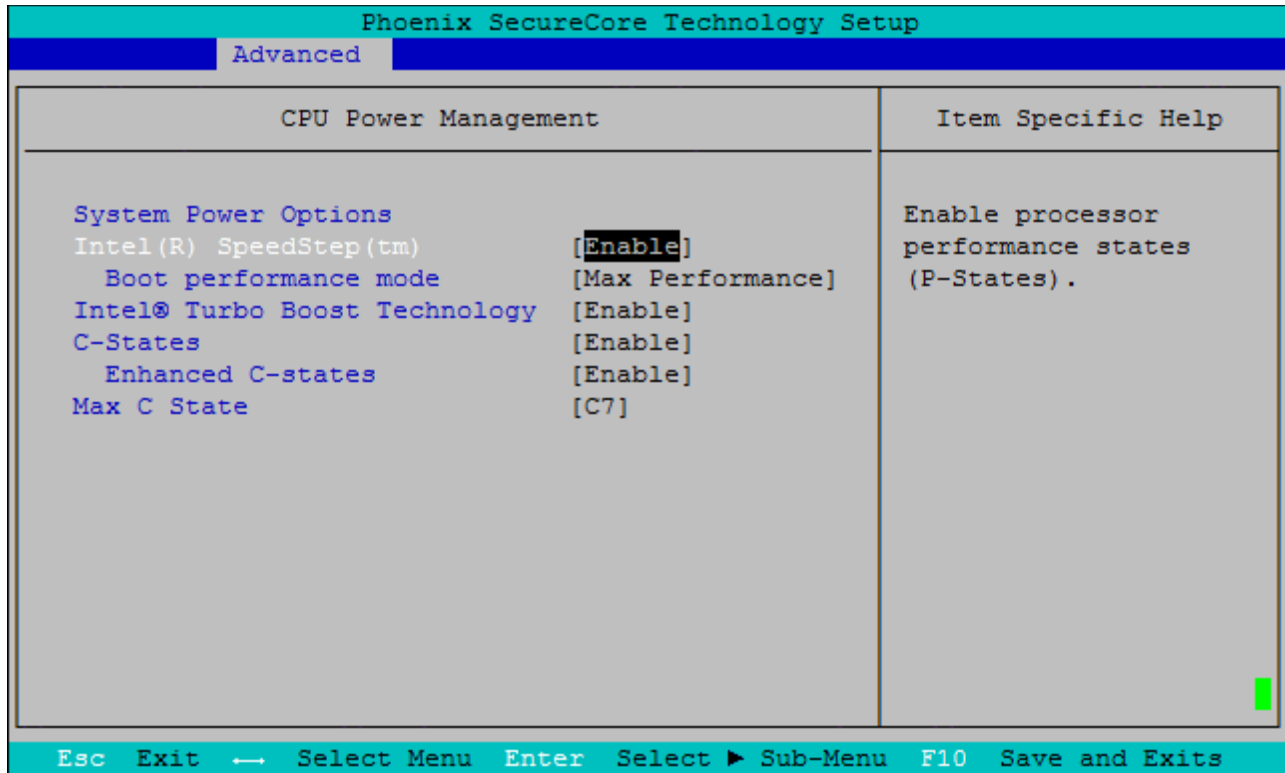

Feature	Options	Description
Intel® SpeedStep(TM)	Enabled Disabled	Enable/Disable processor performance states (P-States)
Boot Performance Mode	Max Performance Max Battery	Select the performance state that the BIOS sets before OS hand-off
Intel® Turbo Boost Technology	Enabled Disabled	Enable to automatically allow processor cores to run faster than the base operating frequency if it's operating below power, current, and temperature specification limits. This option is only valid for CPUs supporting Intel® Turbo Boost Technology
C-States	Enabled Disabled	Enable processor idle power saving states
Enhanced C-States	Enabled Disabled	Enables or Disables C1E/C2E/C4E. When enabled, CPU will switch to minimum speed when all cores enter C-State
Max C-State	C7 C1	Controls the maximum C-State allowed for the processor

Uncore Configuration

Phoenix SecureCore Technology Setup

Advanced

Uncore Configuration	Item Specific Help
<pre> IGD Configuration Integrated Graphics Device [Enable] Primary Display [Auto] RC6 (Render Standby) [Enable] GTT Size [2MB] Aperture Size [256MB] DVMT Pre-Allocated [64M] IGD Turbo [Auto] Spread Spectrum clock [Disable] > IGD - LCD Control </pre>	<pre> Enable : Enable Integrated Graphics Device (IGD) when selected as the Primary Video Adaptor. Disable: Always disable IGD </pre>

F1 Help **↑v Select Item** **+/- Change Values** **F9 Setup Defaults**
Esc Exit **↔ Select Menu** **Enter Select > Sub-Menu** **F10 Save and Exit**

Feature	Options	Description
Integrated Graphics Device	Disable Enable	Enable: enable Integrated Graphics Device (IGD) when selected as the Primary Video Adaptor. Disable: Always disable IGD
Primary Display	Auto IGD PCIe SG	Select which of IGD/PCIe Graphics Devices should be Primary Display or select SG for Switchable/Hybrid Graphics
RC6 (Render Standby)	Disable Enable	Enable or Disable Render Standby support
GTT Size	1MB 2MB	Select the GTT Memory Size of IGD
Aperture Size	128MB 256MB 512MB	Select the Graphics Aperture Size
DVMT Pre-Allocated	64M 96M 128M 160M 192M 224M 256M 288M 320M 352M 384M 416M 448M 480M 512M	Select DVMT 5.0 Pre-Allocated (fixed) Graphics Memory size used by the Internal Graphics device
IGD Turbo	Auto Enable Disable	Select the IGD Turbo feature
Spread Spectrum clock	Disable Enable	Enable or Disable clock chip Spread Spectrum feature

IGD Configuration

Phoenix SecureCore Technology Setup		
Advanced		
IGD Configuration	Item Specific Help	
IGD managed by: Legacy Video BIOS [3777]		
IGD - Boot Type	[Auto]	Select the Video Device activated during POST. This has no effect if external graphics are present.
Backlight Control	[PWM]	
PWM Frequency	[200 Hz]	
Backlight Value	[50%]	
Module switch LVDS - DDI2	[Activate LVDS]	
LVDS Clock Center Spreading	[No Spreading]	
EFP1 Type	[DP with HDMI/DVI]	
Mode Persistence	[Disabled]	
Center Mode	[Disabled]	
Esc Exit ← Select Menu Enter Select ▶ Sub-Menu F10 Save and Exits		


Feature	Options	Description
IGD - Boot Type	Auto CRT EFP LFP EFP2	Select the Integrated Graphics Video Device activated during POST. LFP = Local Flat Panel (LVDS/eDP). EFP = External Flat Panel (Display Port/HDMI)
Backlight Control	None/External PWM PWM Inverted I2C I2C Inverted	Backlight Control Setting
PWM Frequency	200 hz 400 Hz 1kHz .. 40 kHz	Selects the PWM frequency
Backlight Value	0% .. 50% .. 100%	Set LCD backlight brightness (0-100%)
Module switch LVDS - DDI2	Activate DDI2 Activate LVDS	Set LCD backlight brightness (0-100%)
LVDS Clock Center Spreading	No Spreading 0.5% 1.0% 1.5% 2.0% 2.5%	Select LVDS clock frequency center spreading depth
EFP1 Type	DisplayPort Only DP with HDMI/DVI HDMI/DVI	Integrated HDMI/DisplayPort Configuration with External Connectors
Mode Persistence	Disabled Enabled	Enables/Disables Mode Persistence
Center Mode	Disabled CRT EFP EFP2	Select the Display Device that should be centered

System Components

Phoenix SecureCore Technology Setup	
Advanced	
System Component	Item Specific Help
PMIC Configuration PNP Setting [Power&Performance]	Select PNP setting mode, Disable, Performance, Power or Power&Performance mode
Esc Exit ← Select Menu Enter Select ► Sub-Menu F10 Save and Exits	

Feature	Options	Description
PNP Setting	Disabled Power&Performance Ax Stepping Bx Stepping	Select PNP Setting

LAN Configuration

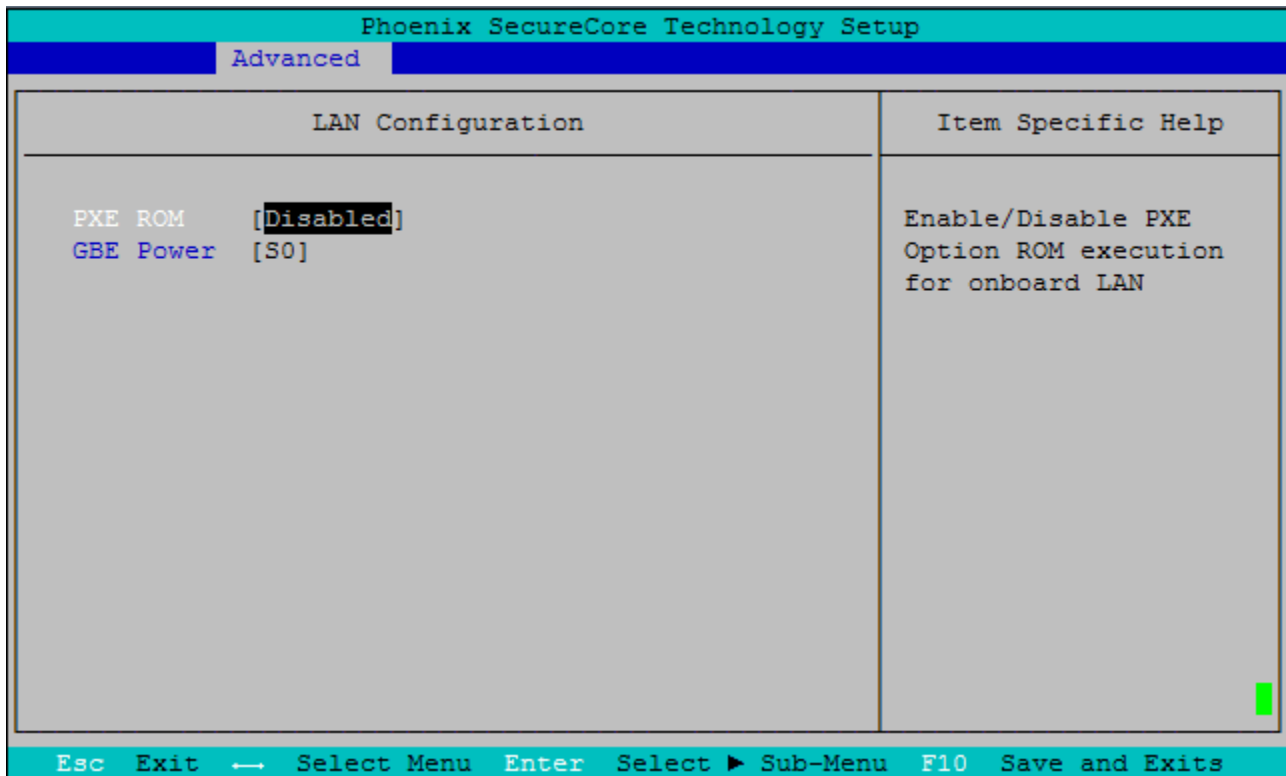

Feature	Options	Description
PXE ROM	Disabled Onboard only Addon only Both	Enable/Disable PXE Option ROM execution for onboard LAN
GBE Power	Disabled S0 S3 → S0 S5 → S0	GBE Power States

South Cluster Configuration

Phoenix SecureCore Technology Setup			
Advanced			
South Cluster Configuration		Item Specific Help	
<ul style="list-style-type: none"> > PCI Express Configuration > USB Configuration > Audio Configuration > SATA Drives > LPSS & SCC Configuration > Miscellaneous Configuration 		PCI Express Configuration Settings	
F1	Help	↑	Select Item
Esc	Exit	←	Select Menu
		+/-	Change Values
		Enter	Select > Sub-Menu
F9	Setup Defaults		
F10	Save and Exit		

PCI Express Configuration

Phoenix SecureCore Technology Setup	
Advanced	
PCI Express Configuration	Item Specific Help
PCIe 0 Speed [Auto] PCIe 1 Speed [Auto] PCIe 2 Speed [Auto] PCIe 3 Speed [Auto] PCI Express Root Port 0 [Enable] PCI Express Root Port 1 [Enable] PCI Express Root Port 2 [Enable] PCI Express Root Port 3 [Enable]	Configure PCIe Speed
F1 Help ↑ Select Item +/- Change Values F9 Setup Defaults Esc Exit ← Select Menu Enter Select > Sub-Menu F10 Save and Exit	

Feature	Options	Description
PCIe Speed	Auto Gen1 Gen2	Select PCIe Speed to Gen1 or Gen2
PCI Express Root Port	Disable Enable	Control the PCI Express Root Port

USB Configuration

Phoenix SecureCore Technology Setup		Item Specific Help
Advanced		
USB Configuration		
xHCI Mode	[Enable]	Mode of operation of xHCI controller. This will also influence EHCI controller settings since certain combinations of those modes are not allowed. 'Smart Auto' mode is supposed to solve USB issues under Windows 7
EHCI Controller	[Disable]	
USB Per-Port Control	[Enable]	
USB Port #0	[Enable]	
USB Port #1	[Enable]	
USB Port #2	[Enable]	
USB Port #3	[Enable]	
USB Over Current		
SOC OC 0	[Disable]	
SOC OC 1	[Disable]	
USB Port 3 OC	[Disable]	
USB Port 4 OC	[Disable]	
USB Port 5 OC	[Disable]	
USB Port 6 OC	[Disable]	

Esc Exit ← Select Menu Enter Select ► Sub-Menu F10 Save and Exits

Feature	Options	Description
xHCI Mode	Smart Auto Enable Disable	Mode of operation of xHCI controller. This will also influence EHCI controller settings since certain combinations of those modes are not allowed. 'SMART Auto' Mode is required for OS with external Driver (e.g. Windows 7), 'Enabled' is recommended for OS with integrated USB 3.0 Support (e.g. Windows 8). Please note, the USB HSIC Hub for COMe USB Ports #4-7 is linked to xHCI controller which allows operation of these USB ports in OS with USB 3.0 driver only (no support in DOS or EFI Shell)
USB Per-Port Control	Disable Enable	Controls each of the CPU USB ports (COMe USB #0-3)
- USB Port #0 - USB Port #1 - USB Port #2 - USB Port #3	Disabled Enabled	Enable/Disable USB port
- SOC #0 OC - SOC #1 OC - USB Port #3 OC - USB Port #4 OC - USB Port #5 OC	Disabled Enabled	Enable/Disable USB Overcurrent function

Audio Configuration

Phoenix SecureCore Technology Setup

Advanced

Audio Configuration	Item Specific Help
<p>Audio Configuration</p> <p>Audio Controller [Enable]</p> <p>HDAudio VCI Enable [Enable]</p> <p>HDAudio Docking Support Enable [Disable]</p> <p>HDAudio PME Enable [Enable]</p> <p>HDAudio HDMI Codec [Enable]</p>	<p>Control Detection of the HDAudio device.</p> <p>Disabled = Azalia will be unconditionally disabled</p> <p>Enabled = Azalia will be unconditionally Enabled</p> <p>Auto = Azalia will be enabled if present, disabled otherwise</p>
<p>F1 Help ↑↓ Select Item +/- Change Values F9 Setup Defaults</p> <p>Esc Exit <> Select Menu Enter Select > Sub-Menu F10 Save and Exit</p>	

Feature	Options	Description
Audio Controller	Enable Disable	Enable / Disable High Definition Audio interface
- HDAudio VCI Enable	Enable Disable	Enable / Disable Virtual Channel 1 of Audio Controller
- HDAudio Docking Support Enable	Enable Disable	Enable / Disable HDAudio Docking Support of Audio Controller
- HDAudio PMCE Enable	Enable Disable	Enable / Disable Power Management capability of Audio Controller
- HDAudio HDMI Codec	Enable Disable	Enable / Disable internal HDMI codec for HDAudio

SATA Drives

Phoenix SecureCore Technology Setup	
Advanced	
SATA Drives	Item Specific Help
SATA Drives Chipset-SATA Controller Configuration Chipset SATA [Enable] SATA Test Mode [Disable] Chipset SATA Mode [AHCI] SATA Port 0 Hot Plug Capability [Disable] SATA Port 1 Hot Plug Capability [Disable]	Enables or Disables the Chipset SATA Controller. The Chipset SATA controller supports the 2 black internal SATA ports (up to 3Gb/s supported per port).
F1 Help ↑ Select Item +/- Change Values F9 Setup Defaults Esc Exit ↔ Select Menu Enter Select > Sub-Menu F10 Save and Exit	

Feature	Options	Description
Chipset SATA	Enable Disable	Enables or Disables the Chipset SATA Controller. The Chipset SATA controller supports the 2 internal SATA ports (up to 3Gb/s supported per port)
SATA Test Mode	Disable Enable	Enables or Disables the SATA Test Mode
Chipset SATA Mode	IDE AHCI	IDE: compatibility mode, disables AHCI. AHCI: supports advanced SATA features such as NCQ. Warning: do not change after OS install
SATA Port 0 Hot Plug Capability	Enable Disable	If enabled, SATA port will be reported as HotPlug capable
SATA Port 1 Hot Plug Capability	Enable Disable	If enabled, SATA port will be reported as HotPlug capable

LPSS & SCC Configuration

Phoenix SecureCore Technology Setup	
Advanced	
LPSS & SCC Configuration	Item Specific Help
LPSS & SCC Devices Mode [PCI Mode]	LPSS & SCC Devices Mode Settings
SCC Configuration SCC eMMC Boot Controller [Auto Detect] eMMC 4.5 Support [Enable] eMMC DDR50 Support [Disable] eMMC HS200 Support [Disable] eMMC retune timer value [8]	
SCC SD Card Support [Enable] SD SDR 25 Support [Enable] SD SDR 50 Support [Enable]	

Esc Exit ← Select Menu Enter Select ► Sub-Menu F10 Save and Exits

Feature	Options	Description
LPSS & SCC Devices Mode	ACPI Mode PCI Mode	Select operation mode for Low Power Super Speed LPSS devices eMMC/SDCard. For eMMC full speed operation the LPSS mode should be set to "ACPI"
SCC eMMC Boot Controller	Disable Auto Detect eMMC 4.41 eMMC 4.5	Disable or select eMMC Boot mode
eMMC 4.5 support	Disable Enable	Enabled: eMMC 4.5, Disabled: eMMC 4.41
eMMC DDR50 Support	Disable Enable	Enable / Disable DDR50 speed mode for eMMC
eMMC HS200 Support	Disable Enable	Enable / Disable HS200 speed mode for eMMC. For eMMC full speed operation the HS200 mode should be enabled.
- eMMC retune timer value	8	Select the retune timer in HS200 mode
SCC SD Card Support	Disable Enable	Enable / Disable SD Card Support
SD SDR 25 Support	Disable Enable	Enable bus speed operation up to 25MB/s for SDCard (High Speed). Disable limits bus speed to 12.5MB/s (normal speed)
SD SDR 50 Support	Disable Enable	Enable bus speed operation up to 50MB/s for SDCard (Ultra High Speed). Disabled activates SDR25 mode setting

Miscellaneous Configuration

Phoenix SecureCore Technology Setup

Advanced

Miscellaneous Configuration	Item Specific Help
<pre> Miscellaneous Configuration High Precision Timer [Enable] Boot Time with HPET Timer [Disable] State After G3 [S0 State] Clock Spread Spectrum [Disable] SMM LOCK [Enable] Pci Mmio Size [2GB] PXE ROM [Disabled] </pre>	<p>Enable or Disable the High Precision Event Timer</p>

F1 Help **↑** Select Item **+/-** Change Values **F9** Setup Defaults
Esc Exit **<>** Select Menu **Enter** Select > Sub-Menu **F10** Save and Exit

Feature	Options	Description
High Precision Timer	Disable Enable	Enables or Disables the High Precision Event Timer
Boot Time with HPET Timer	Disable Enable	Boot time calculation with High Precision Event Timer enabled
State After G3	S0 State S5 State	Specify what state to go to when power is re-applied after a power failure (G3 state). S0 = Power on, S5 = Stay off
Clock Spread Spectrum	Disable Enable	Enables or Disables the Clock Spread Spectrum
SMM LOCK	Disable Enable	Enables or Disables the SMM Lock feature. It will lock the SMRAM and unable load SMM driver any more
PCI Mmio Size	2GB 1.5GB 1.25GB 1GB	Selects the PCI Mmio Size

SMBIOS Event Log

Phoenix SecureCore Technology Setup		
Advanced		
SMBIOS Event Log	Item Specific Help	
Event Log Validity	Valid	Enable/Disable Event Log.
Event Log Capacity	Space Available	
Event Log	[Disabled]	
> View SMBIOS event log		
Mark SMBIOS events as read	[Enter]	
Clears SMBIOS events	[Enter]	
F1 Help ↑ Select Item +/- Change Values F9 Setup Defaults Esc Exit ↔ Select Menu Enter Select > Sub-Menu F10 Save and Exit		

Feature	Options	Description
Event Log	Disable Enable	Enables or Disables the SMBIOS Event Log
Mark SMBIOS events as read	Enter	Mark SMBIOS events as read. Marked SMBIOS events won't be displayed
Clears SMBIOS events	Enter	Clear SMBIOS events


Onboard UART Configuration

Phoenix SecureCore Technology Setup	
Advanced	
Onboard UART configuration	Item Specific Help
Serial Port 0 [Enabled]	Enable/Disable Serial Port.
Base Address [3F8]	
IRQ [4]	
Serial Port 1 [Enabled]	
Base Address [2F8]	
IRQ [3]	

Esc Exit ← Select Menu Enter Select ► Sub-Menu F10 Save and Exits

Feature	Options	Description
Serial Port 0	Disabled Enabled	Enable/Disable Serial Port
- Base Address	3F8 2F8 3E8 2E8	Configure Serial Port Base Address
- IRQ	3 4 5 6 7 12	Configure Serial Port IRQ
Serial Port 1	Disabled Enabled	Enable/Disable Serial Port
- Base Address	3F8 2F8 3E8 2E8	Configure Serial Port Base Address
- IRQ	3 4 5 6 7 12	Configure Serial Port IRQ

12.5.3 Security

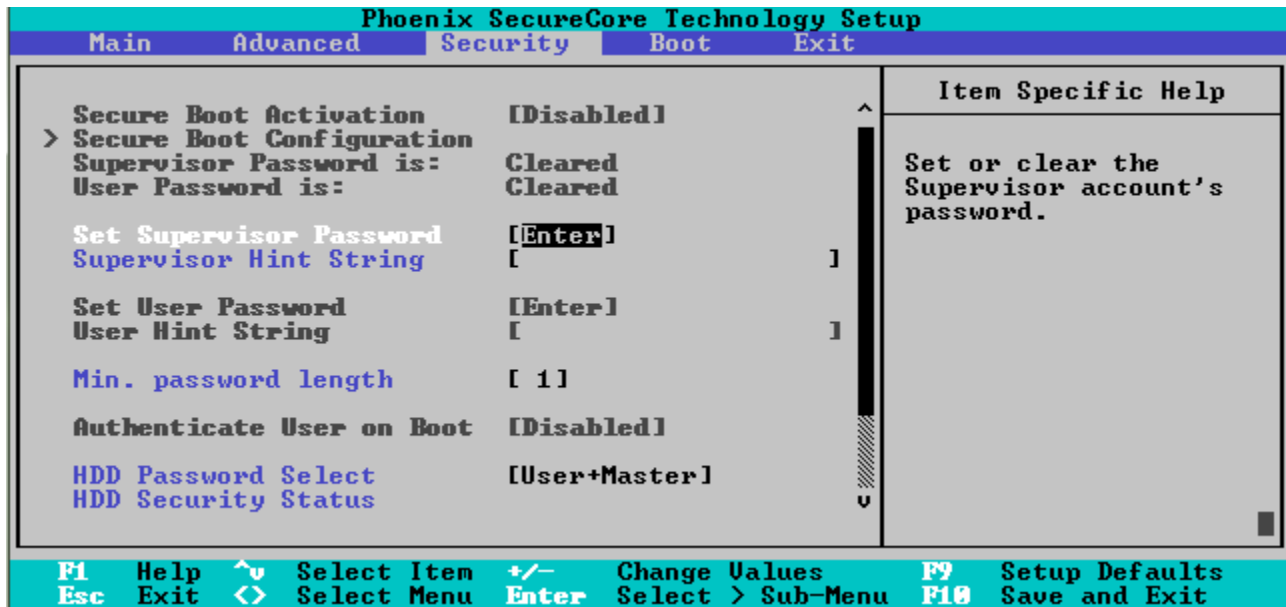

Feature	Options	Description
Set Supervisor Password	Enter	Set or clear the Supervisor account's password
Supervisor Hint String	-	Press Enter to type Supervisor Hint String
Min. password length	1	Set the minimum number of characters for password (1-20)
TPM Support	Disabled Enabled	This is used to decide whether TPM support should be enabled or disabled

TPM Options

Feature	Options	Description
TPM Action	No Change Enable Disable Activate Deactivate Clear Enable and Activate Disable and Deactivate Set Owner Install, with state=True Set Owner Install, with state=False Enable, Activate, and Set Owner Install with state=True Disable, Deactivate, and Set Owner Install with state=False Clear, Enable, and Activate Require PP for provisioning Do not require PP for provisioning Require PP for clear Do not require PP for clear Enable, Activate, and clear Enable, Activate, Clear, Enable, and Activate	Enact TPM Action
Omit Boot Measurements	Disabled Enabled	Enabling this option causes the system to omit recording boot device attempts in PCR[4]

Secure Boot

Phoenix SecureCore Technology Setup			
Security			
Secure Boot Configuration		Item Specific Help	
UEFI Secure Boot	Disabled	Enable or disable secure boot function.	
Protected Signatures	Disabled (Setup Mode)		
Customized Signatures	Disabled (Standard Mode)		
CertNames	Win8 Certificates		
Secure Boot Option	[Enabled]		
Reset to Default	[Enter]		
Change to Customization	[Enter]		
F1 Help ↑ Select Item +/- Change Values F9 Setup Defaults Esc Exit <> Select Menu Enter Select > Sub-Menu F10 Save and Exit			

Feature	Options	Description
Secure Boot Option	Enabled Disabled	Set or clear the Supervisor account's password
Reset to Default	Enter	Reset Secure Boot options to manufacturing defaults
Change to customization	Enter	PK will be deleted, the platform will be changed to setup mode, and secure boot is disabled automatically.

12.5.4 Boot

Phoenix SecureCore Technology Setup						
Main	Advanced	Security	Boot	Exit		
Boot Priority Order 1. ATAPI CD: 2. SATA HDD0: UGBA2TDC16H0M1-KU 3. SATA HDD1: 4. USB HDD: 5. USB CD: 6. USB FDD: 7. eMMC Card0: 8. SD Card1: 9. Internal Shell 10. PCI LAN:			Item Specific Help Keys used to view or configure devices: ^ and v arrows Select a device. '+' and '-' move the device up or down. 'Shift + 1' enables or disables a device. 'Del' deletes an unprotected device.			
F1	Help	^v	Select Item	+/- Change Values	F9	Setup Defaults
Esc	Exit	<>	Select Menu	Enter Select > Sub-Menu	F10	Save and Exit

12.5.5 Exit

Phoenix SecureCore Technology Setup					
Main	Advanced	Security	Boot	Exit	
Exit Saving Changes Exit Discarding Changes Load Setup Defaults Discard Changes Save Changes					Item Specific Help Equal to F10, save all changes of all menus, then exit setup configure driver. Finally resets the system automatically.
F1	Help	↑	Select Item	+/-	Change Values
Esc	Exit	↔	Select Menu	Enter	Select > Sub-Menu
				F9	Setup Defaults
				F10	Save and Exit

Corporate Offices

Europe, Middle East & Africa Lise-Meitner-Str. 3-5 86156 Augsburg Germany Tel.: +49 (0)821/ 4086-0 Fax: +49 (0)821/ 4086-111 info@kontron.com	North America 14118 Stowe Drive Poway, CA 92064-7147 USA Tel.: +1 888 294 4558 Fax: +1 858 677 0898 info@us.kontron.com	Asia Pacific 17 Building, Block #1, ABP. 188 Southern West 4th Ring Beijing 100070, P.R.China Tel.: + 86 10 63751188 Fax: + 86 10 83682438 info@kontron.cn	
--	---	--	---